

Floodplain Mapping & Hydraulic Analysis with HEC-GeoRAS 4.1.1 and ArcGIS 9.1

Prepared by Sarah Meyer¹ and Francisco Olivera², Ph.D., P.E.
May 2007

Contents:

1. Goals of Exercise & Additional Resources
 2. Downloading & Activating the HEC-GeoRAS 4.1.1 Extension
 3. Using ArcMap to Create RAS (Geospatial) Layers for a Stream
 4. Exporting GIS Data to HEC-RAS
 5. Hydraulic Analysis in HEC-RAS
 6. Importing Data from HEC-RAS
 7. Mapping Floodplains Using GIS.
-

1. Goal of the exercise, additional resources and study area.

The purpose of this exercise is to familiarize the user with the floodplain mapping capabilities of the extension HEC-GeoRAS developed by the Hydrologic Engineering Center (HEC) of the U.S. Corps of Engineers. HEC-GeoRAS 4.1.1 requires ArcGIS 9.1 with the 3D Analyst and the Spatial Analyst extensions. This tutorial was successfully completed using HEC-RAS 3.1.3. The HEC-GeoRAS extension has many optional capabilities that will not be explored or do not apply to the stream used in this tutorial.

Three manuals, prepared by the Hydrologic Engineering Center (HEC), were used extensively in the preparation of this tutorial. The references for these manuals are listed below:

- *HEC-GeoRAS GIS Tools for Support of HEC-RAS Using ArcGIS, User's Manual*, CPD – 83, Hydrologic Engineering Center, U.S. Army Corps of Engineers, Davis, California, September 2005.
http://www.hec.usace.army.mil/software/hecras/hec-georas_downloads.html
- *HEC-RAS River Analysis System, User's Manual*, CPD – 68, Hydrologic Engineering Center, U.S. Army Corps of Engineers, Davis, California, November 2002.
<http://www.hec.usace.army.mil/software/hecras/hecras-document.html>

¹ **Sarah Meyer** is a Civil Engineering Graduate of Texas A&M University. She developed this exercise in partial fulfillment of the requirements of the *CVEN658 Civil Engineering Applications of GIS* class taught the Fall 2006.

² **Francisco Olivera** (folivera@civil.tamu.edu) is an Assistant Professor of Civil Engineering at Texas A&M University. He teaches graduate and undergraduate courses and conducts research on the use of GIS in water resources engineering.

- *HEC-RAS River Analysis System, Hydraulic Reference Manual*, CPD – 69, Hydrologic Engineering Center, U.S. Army Corps of Engineers, Davis, California, November 2002.
<http://www.hec.usace.army.mil/software/hecras/hecras-document.html>

The HEC-RAS manuals are useful to answer any questions you may have about the hydraulic analysis portion of this tutorial. If you want to apply the procedures from this tutorial to a new location or you need to trouble-shoot a specific problem, all three manuals will be a valuable reference to you.

The region of study for this exercise is a small tributary to the Guadalupe River named Cypress Rapids Creek, which is located in New Braunfels, TX. This creek is approximately one mile in length, drains about 2.3 square miles, and has two bridge crossings within the study reach.

The required data for this exercise is stored in the folder **TutorialDataGeoRAS**. Maintaining the folder structure, copy the folder to your hard drive. To be safe, make sure your folder name and path do not contain blank spaces. You might need to change the folder and file properties to remove the *Read Only* attribute.

2. Downloading and activating the HEC-GeoRAS 4.1.1 extension


If you already have HEC-GeoRAS 4.1.1 installed in your computer, you may skip this section and continue at **3. Using ArcMap to create RAS (geospatial) layers for a stream**.

- a.) Make sure that any old versions of HEC-GeoRAS, APFramework, MSXML or XML Data Exchange Tools are properly uninstalled. Remove these programs through the Windows **Control Panel** using the **Add/Remove Programs** option. If you do not find APFramework in the **Add or Remove Programs** list, run the program **Unwise.exe**, located in C:\Program Files\ESRI\WaterUtils\APFrameworkX folder, to uninstall it. Note that the location of **Unwise.exe** might change depending on where ArcGIS was installed in your computer. Additionally, navigate to C:\Program Files\ESRI\WaterUtils, the default storage location of APFramework and XML Data Exchange Tools, and delete the folder.
- b.) Navigate to <http://www.hec.usace.army.mil/software/hecras/hecras-downloads.html> and click on **Primary Download Site** under the heading **HEC-GeoRAS 4.1.1 for ArcGIS 9.1**. Select **Save** on the pop-up menu, navigate to the folder where you would like to store the **HEC-GeoRAS4.1.1.exe** file, and click **Save**. For your convenience, the file **HEC-GeoRAS4.1.1.exe** has been included in the folder HECSoftware, so you do not have to access the Internet and download it if you prefer not to do so.
- c.) Use **Windows Explorer** to navigate to the folder where you just saved the **HEC-GeoRAS4.1.1.exe** file. Unzip it and save it in the same folder. Next, open the newly unzipped folder **HEC-GeoRAS 4.1.1** and open the text file **Installation Instructions 4.1.1.txt**. The instructions in this text file will guide you through the remainder of the file installation process.

- d.) You are now ready to start working with HEC-GeoRAS. Open ArcMap. HEC-GeoRAS will be loaded as a toolbar in ArcMap.




If the HEC-GeoRAS toolbar is not loaded in ArcMap, select **Tools/Customize** from the main interface menu, click on the **Toolbars** tab and place a checkmark in the box corresponding to **HEC-GeoRAS**. While in this menu, you may also want to activate the **Editor** toolbar, as it will be needed later.

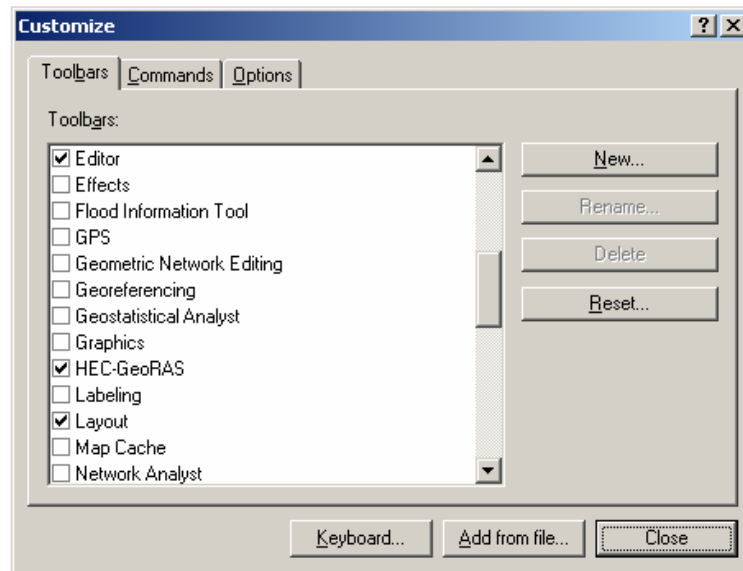


You will also need to activate both the Spatial Analyst and 3D Analyst extensions for the HEC-GeoRAS toolbar to properly work. In ArcMap, select **Tools/Extensions** from the main interface menu. Place a checkmark in the box corresponding to the **3D Analyst** and **Spatial Analyst** extensions. If the **3D Analyst** and **Spatial Analyst** toolbars are not loaded, select **Tools/Customize** and click on the **Toolbars** tab as you did before and check the **3D Analyst** and **Spatial Analyst** boxes. You are now ready to work with HEC-GeoRAS.

3. Using ArcMap to Create RAS (Geospatial) Layers for a Stream

- a.) Save your empty ArcMap map in your working directory. In this example the map is named **RASLayers.mxd**.
- b.) The main data input for creating floodplains for a river is a digital terrain model (DTM). For this exercise, you have been provided a triangulated irregular network (TIN) of the creek study area. This TIN was created from a DEM with cell size of 2-feet, which makes it appropriate for use in hydraulic analyses and floodplain modeling.


Add the TIN, named “TIN_2ft”, to the map by selecting the **Add Data** button . Navigate to the directory where the data are stored, select **TIN_2ft**, and press the **Add** button.

Once the TIN has been added to ArcMap, your map should look similar to the figure below. Notice the river labels in this figure will not be on your map. The rivers on the figure are labeled so that you can distinguish between the study reach Cypress Rapids Creek and the larger Guadalupe River.

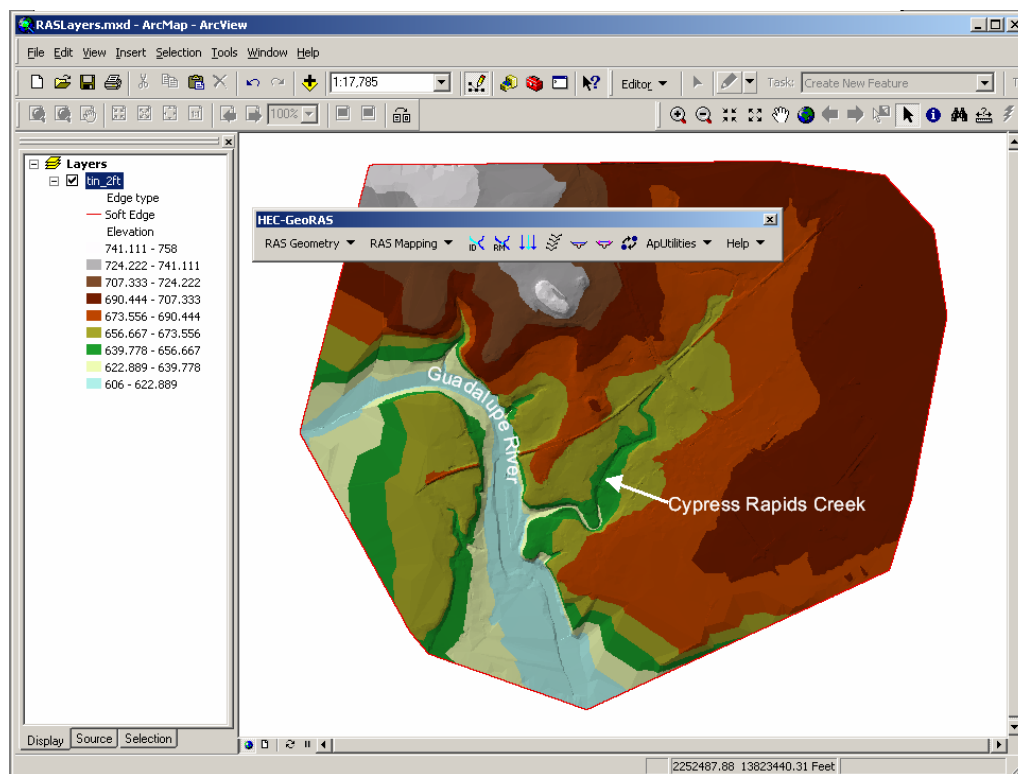


- c.) We are now ready to create the RAS layers in ArcMap, which are used to create geometric data sets that will be modeled in HEC-RAS. Only two RAS layers are needed to map a floodplain (**Stream Centerline** and **Cross Section Cutlines**). All other layers are optional. In this tutorial, we will use a few of the optional RAS layers.


The RAS layers can be created in one step and will be stored collectively in a GeoDatabase, which HEC-GeoRAS creates automatically. By default, this GeoDatabase will be saved in the same location as the ArcMap project with which you are working and will be given the same name. To create the RAS layers, on the HEC-GeoRAS toolbar, select **RAS Geometry / Create RAS Layers / All**, as shown in the following figure.

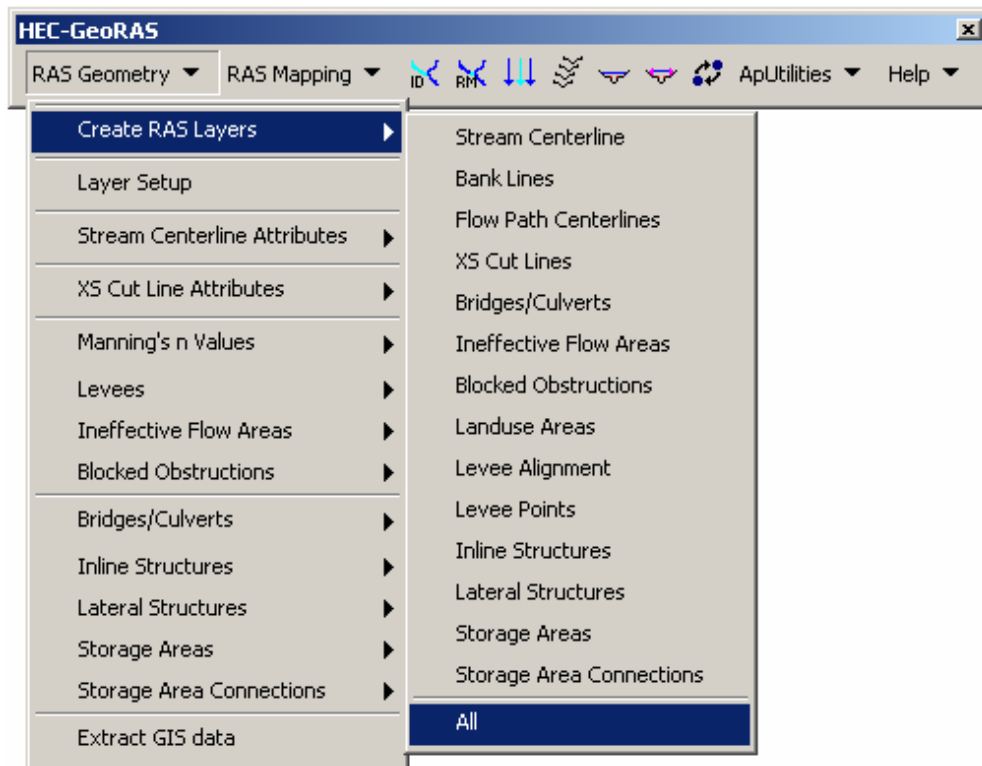

Then, the following pop-up window will appear. For this exercise, we will accept all of the default RAS layer names by choosing **OK** on the **Create All Layers** window.

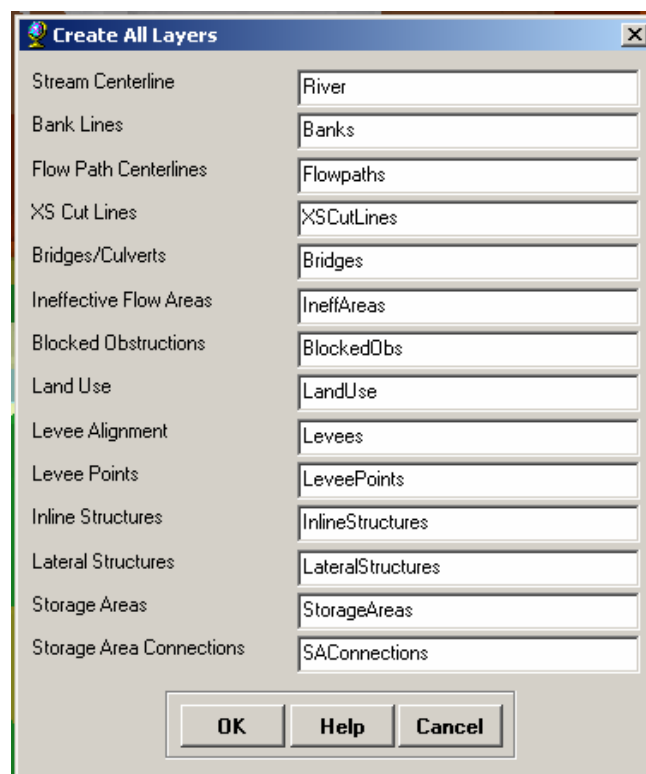

It may take a few seconds, but once the RAS layers are successfully created, you will see the following message and the new layers will appear in the table of contents.

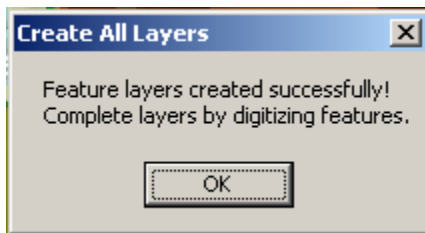

The following sections discuss how to create (digitize) each individual RAS layer.





i. *Stream Centerline Layer*

This layer will be used to digitize (draw) the river reach network for the system you are studying. For this tutorial, we will digitize only one stream with one reach. It is possible, though, to model networks of streams with HEC-GeoRAS, but that will not be discussed here.

Note: Always digitize the stream in the direction of flow. That is, you must begin at the most upstream end of the stream, and work your way downstream ending at the outlet or beginning of the next downstream reach.


In ArcMap, on the Editor toolbar, select **Editor / Start Editing** from the drop-down menu. Select **Create New Feature** in the task window of the toolbar and **River** (name of stream centerline) for the target feature class, as seen in the figure below.




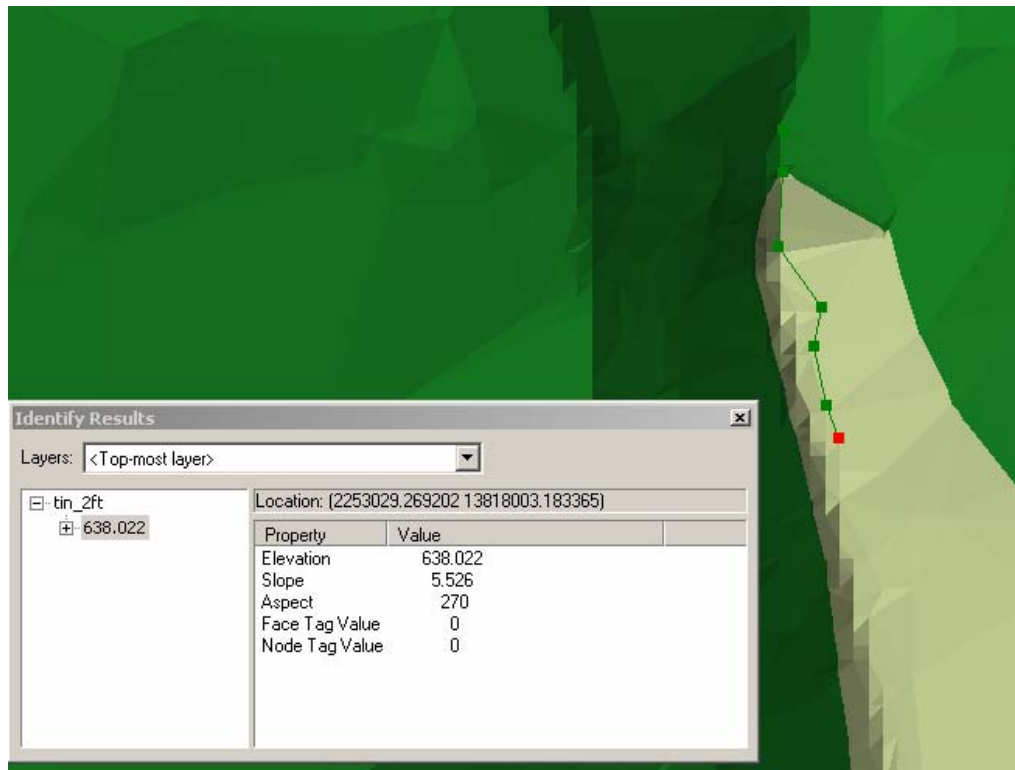
Select the sketch tool  from the Editor toolbar to digitize the stream centerline in the downstream direction. Left-clicking the mouse will drop a vertex point for the line, and double-clicking the left mouse button will finish the line. You can pan  and zoom in and out  without interrupting your line drawing. After panning or zooming you will have to select the sketch tool again, to resume drawing your line. Selecting the undo tool  will remove the last point you placed and can be very useful for erasing mistakes. When your centerline is complete, from the Editor toolbar, select **Editor / Save Edits** and then **Editor / Stop Editing** to end your edit session.

Digitizing the Stream Centerline


The following picture shows a close-up view of the stream. Begin digitizing your stream centerline at the downstream end of the railroad crossing and follow through to the outlet into the Guadalupe River.

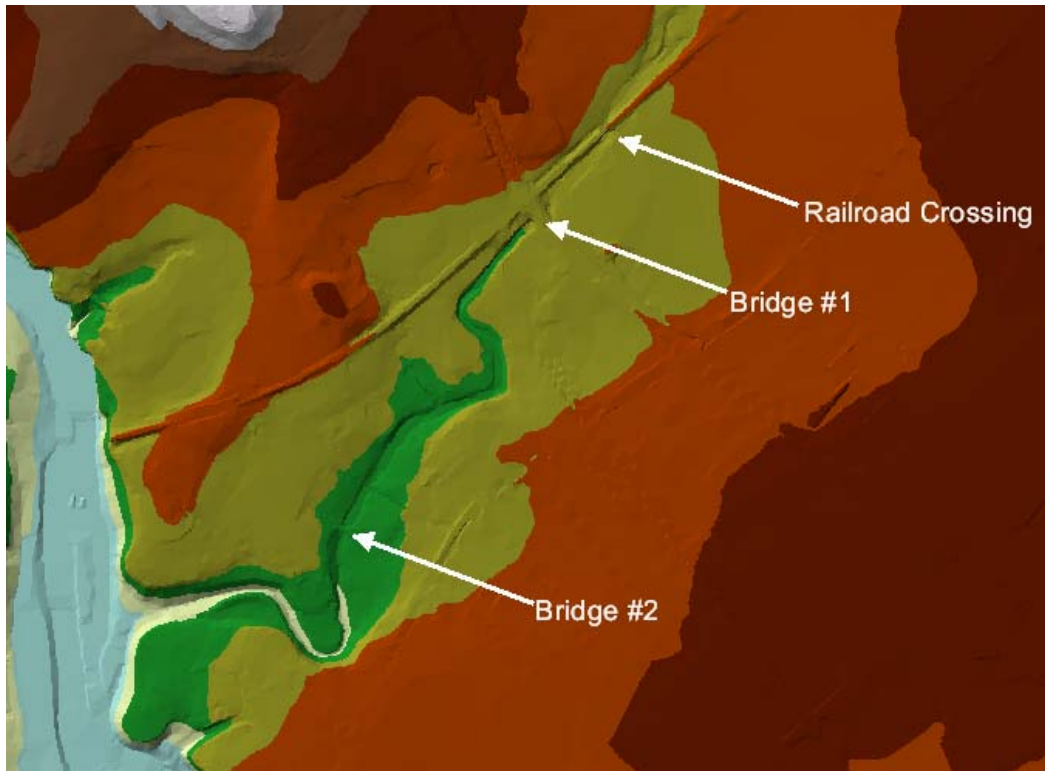


The next picture shows a close-up view of digitizing the stream. The stream centerline will follow the path of lowest elevation, so care must be taken to find the lowest elevations and then connect them with the streamline. You can find individual elevation points on the TIN by selecting the Identity tool , and then clicking on the TIN layer in the map. A pop-up box will appear, listing the elevation at that point.



The next picture shows a close-up view of one of the bridge crossings. When digitizing the stream follow from the centerline of the upstream side of the bridge to the centerline of the downstream side of the bridge, passing through the center of the bridge.

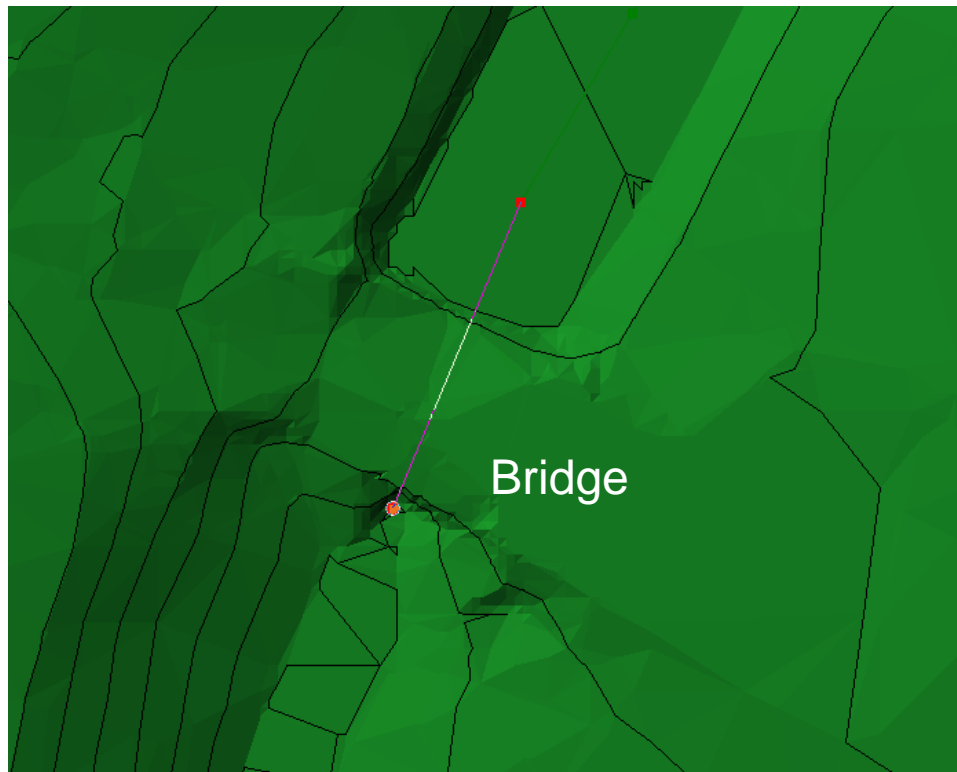

ii. *River Reach Name*


Each river and each reach within each river must have a name which uniquely identifies it. The River Reach ID tool  on the HEC-GeoRAS toolbar will allow you to number the reaches. Click on the River Reach ID tool. Use the cursor to select the first river reach (in this tutorial we have only one reach). The following box will appear. Type in a name for the river and reach you selected, then click **OK**.



After labeling the river reach, open and examine the attribute table for the river centerline “River”. Notice that many of the fields in the attribute table have been automatically populated.

iii. *Network Connectivity*


Next, we will populate the “ToNode” and “FromNode” fields in the River centerline attribute table. From the HEC-GeoRAS toolbar select **RAS Geometry / Stream Centerline Attributes / Topology**. The following box will appear.

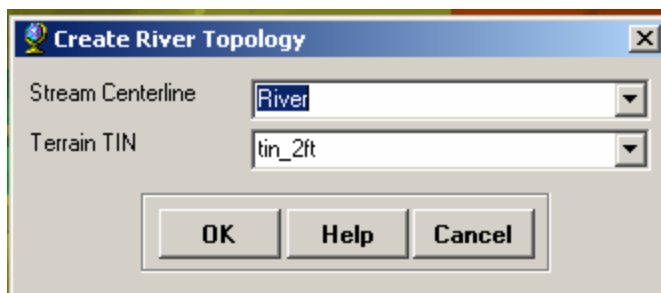

Select the name of your stream centerline and terrain TIN in the drop-down menus and then select **OK**. After you do, the following message will appear.



Next, to determine the length of each reach and populate the “FromSta” and “ToSta” fields in the attribute table, from the HEC-GeoRAS toolbar select **RAS Geometry / Stream Centerline Attributes / Lengths/Stations** from the menu. You’ll receive the following message.

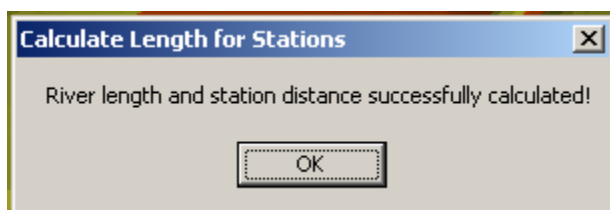





iv. *Bank Lines Layer*

The purpose of creating this layer is to distinguish between the main channel of the river and the floodplains (overbanks) of the river. The bank lines will be created in similar fashion as the river centerline and also starting from upstream.

On the Edit toolbar, select **Editor / Start Editing**. Make sure the task window of the Edit toolbar says **Create New Feature** and that your target is now set to **Banks**.




Select the sketch tool from the Editor toolbar and begin digitizing either the right or left bank line in the downstream direction. Left-clicking the mouse will drop

a vertex point for the line, and double-clicking the left mouse button will finish the line. You are allowed to pan  and zoom in and out  without interrupting your line drawing. After panning or zooming you will have to select the sketch tool  again, to resume drawing your line. Selecting the undo tool  will remove the last point you placed and can be very useful for erasing mistakes. When the bank line is complete, from the Editor toolbar, select **Editor / Save Edits** and then **Editor / Stop Editing** to end your edit session.

Digitizing the Bank Lines

Contours lines can help guide you digitize the bank lines. Two-foot contours are provided in the data set and can be added to the map to assist you.


The following picture shows an example of drawing bank lines. You will have to zoom in closely to the section of the river you are working with. You want the bank lines to represent the edges of the main channel. In the following picture, you will see that the bank line is drawn at what appears to be the edge of the creek, at the top of the steepest grade from the creek and before the land planes out again on a more gradual slope along the floodplain. Note that bank lines do not coincide with contour lines.

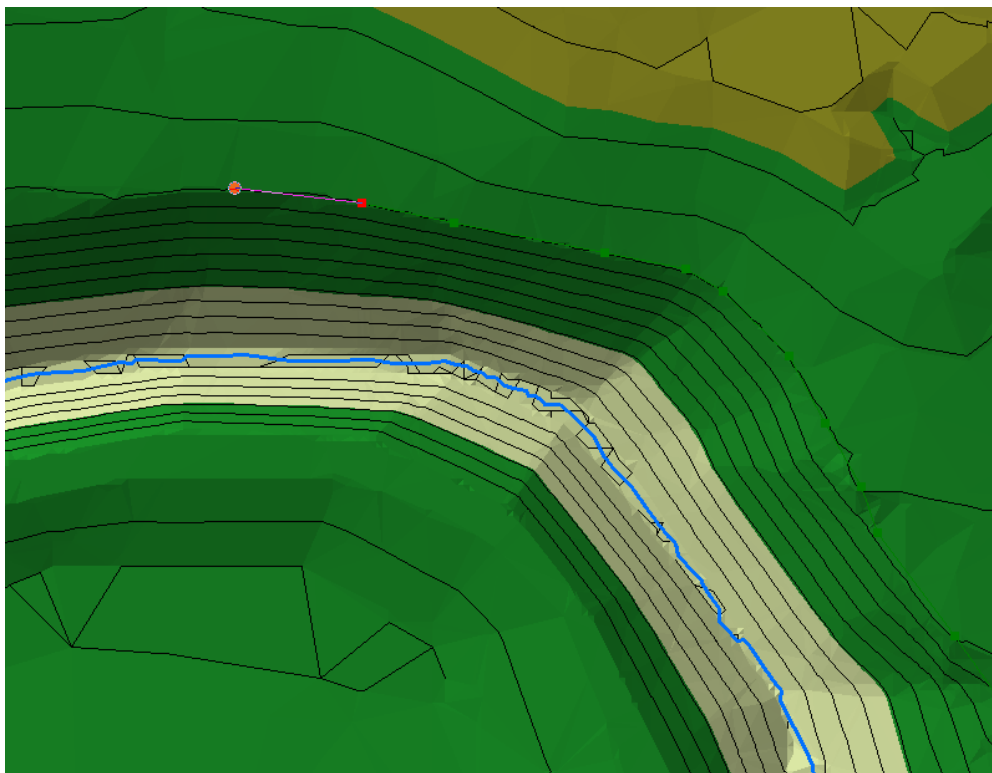


v. *Flowpath Centerlines*

The flowpath centerline layer is a set of lines that follows the center of mass of the water flowing down the river. For the main channel, the stream centerline is the flowpath centerline. For the channel overbanks (floodplains), the flowpath centerline is located in the center of the overbank, and is set slightly outside the main channel bank lines. Note that the widths of the floodplains are unknown thus far. The flowpath centerlines are used to calculate the downstream reach lengths between cross-sections. Flowpath centerlines are also created from upstream to downstream according to the following instructions.


You have already created a **Flowpaths** feature class, but following these steps will save you time. In the HEC-GeoRAS toolbar, select **RAS Geometry / Create RAS Layers / Flowpath Centerlines**. The following menu will appear asking if you would like to copy the stream centerline as your main channel flowpath line.

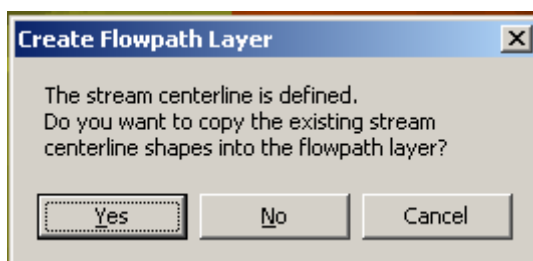


Select **Yes**. In the following window, select the **Stream Centerline** and **Flowpath Centerlines** feature classes and click **OK**, and the following message window will appear. Click **OK**.

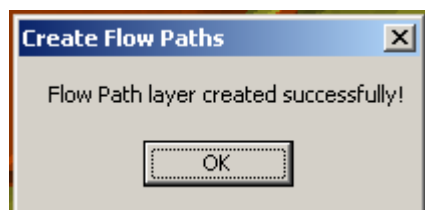

You still need to digitize the overbank flowpath lines in the downstream direction. Do this in an edit session, with **Create New Feature** as the task and **Flowpaths** as the target in the Editor toolbar. Draw the flowpaths using the same methods described above for digitizing the stream centerline and bank lines.

Next, you need to label each flowpath line using the **Assign Line Type** tool . After clicking on the **Assign Line Type** tool, click on a **Flowpaths** line, and then select the correct option (i.e., right or left) in the window that pops up and click **OK**. Repeat with all three flowpaths. *Note the right flowpath is the line on your right if you were looking downstream and water was hitting you in the back.*

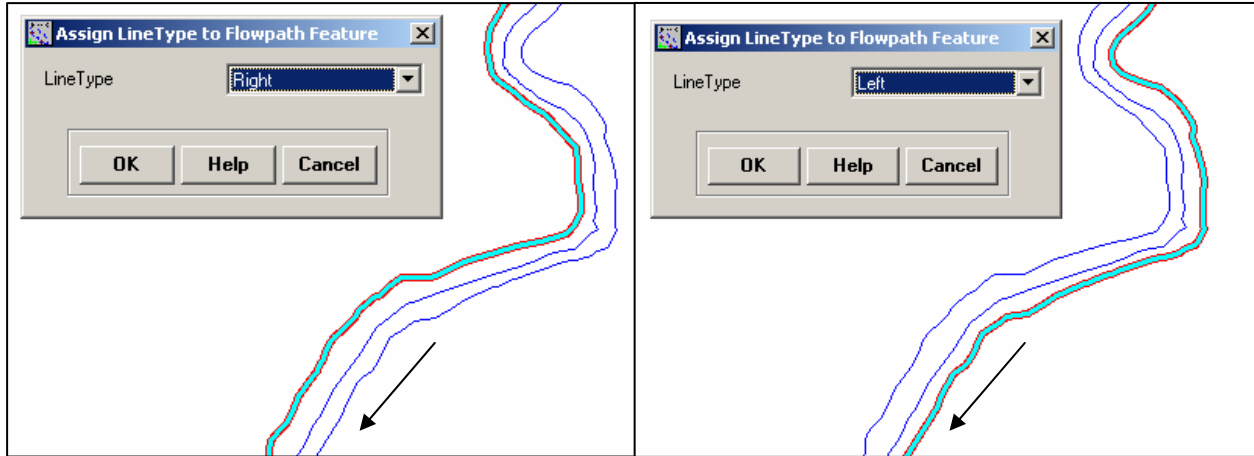


vi. *XS Cut Lines*

Cross-sectional cut lines are used to define cross sections along the channel network by using vertical planes (i.e., the XS cut lines) to cut the terrain TIN. There are a few important rules to keep in mind when drawing cross-section cut lines.

- Cut lines should be perpendicular to the direction of flow. You can use both the river centerline and the flowpath lines to assist you in this task. You can dog-leg cut lines if need be, to keep them perpendicular to the direction of flow.
- Cut lines should be drawn directionally from left to right bank.
- Cut lines should extend far enough on either side of the channel to encompass the entire portion of the floodplain you want to model. They should end at the same elevation at both ends.
- Cut lines should not intersect each other.
- Cut lines should be spaced close enough to account for notable changes in the hydraulics or geometry of the stream, such as changes in discharge, slope, cross section shape, roughness or presence of hydraulic structures (bridges, levees, weirs.)
- Each bridge intersection will require 4 cut lines, 2 upstream of the bridge and 2 downstream of the bridge. See the following figure for an illustration for spacing these cross sections. In this figure, L_c represents the contraction reach length and L_e is the expansion reach length. Typically, $L_c < L_e$ as shown in the picture. These distances can be determined by field investigation during high flows or by examining the TIN to locate the point in the channel where the flowpath has fully expanded or contracted. The flowpath lines should be parallel to each other where cross-sections 1 and 4 are placed. Cross-sections 2 and 3 should be placed within a short distance of the upstream and downstream ends of the bridge. The purpose


of placing these cross-sections near the bridge is to capture the natural ground elevations directly next to the bridge. A good rule of thumb is to draw cross-sections 2 and 3 at the toe of the bridge embankment on their respective sides of the bridge.


Note: More information on this topic can be found on pages 6-23 to 6-26 in the HEC-RAS User's Manual. There is also an empirical method of determining the distances L_c and L_e based upon channel slope, ratios for bridge width opening to the total floodplain width, and ratios of Manning's roughness values (n) for the main channel and floodplain explained in this section of the manual. This approach, however, is not used in this tutorial.

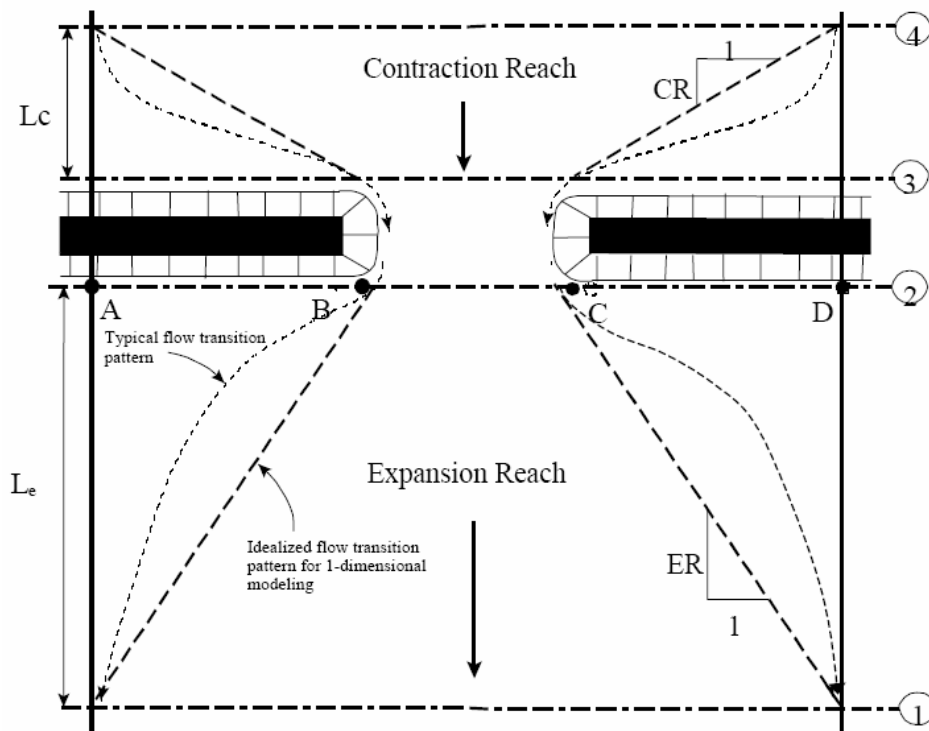

(USACE HEC-RAS User's Manual, 2002)


To draw cut lines, start an editing session and select **Create New Feature** from the Task menu and **XSCutLines** from the Target menu. Draw all the cut lines (do not forget to draw the bridge cross sections!) and save your edits. As you are drawing cut

lines you can preview the cross-section using the XS Plot tool . After pressing the XS Plot tool, left-click on the cross-section of interest, a plot will appear in a new window. This feature will help you ensure you are drawing your cross-sections long enough to capture the entire floodplain. After drawing the cut lines, they should look similar to the following figure. Note the bridge location in the upper right corner. Also note that, even though two of the cross sections might look like intersecting, they are just very close to each other but do not intersect.

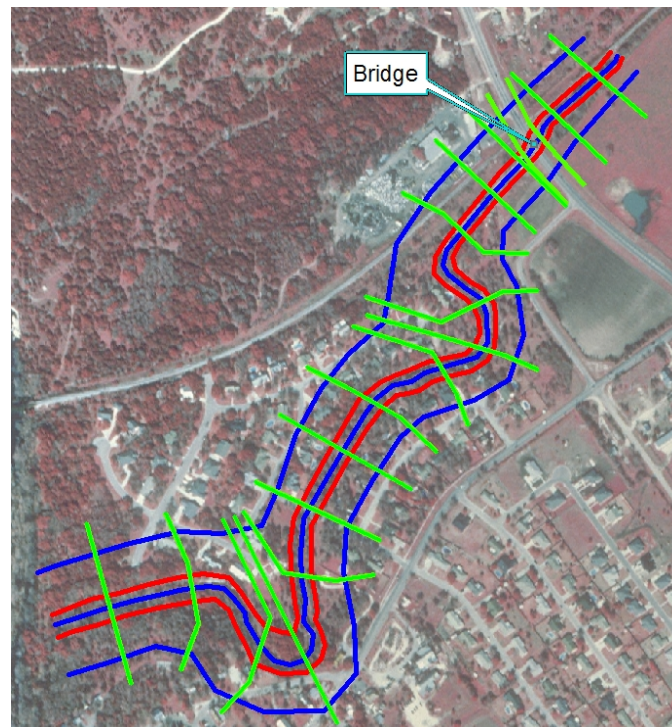


vii. *Attributing Cross-Section Cut Lines & Creating a 3D Feature Class*

Now, we will populate the attribute table of the XSCutLines feature class we just digitized. From the HEC-Geo RAS toolbar, select **RAS Geometry / XS Cut Line Attributes / All**. The following pop-up window will be displayed. Use the drop-down menu to select the correct layer name for each item on the list. The first 5 items on the list will be used to populate the empty fields in the attribute table of the XSCutLines feature class. The last item (i.e., XS Cut Lines Profiles) is the name of a new feature class that will be created. The 2D feature class **XSCutLines** will be intersected with the TIN to create a feature class with 3D cross-section cut lines. Accept the default name for this feature class **XSCutLines3D**.

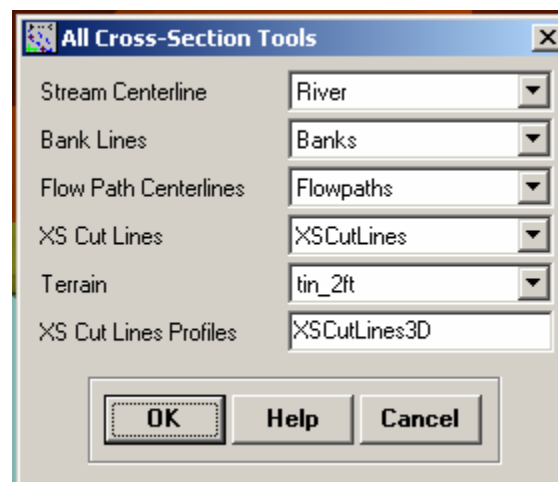

Select **OK** on the **All Cross-Section Tools** window and the following message will appear. Select **OK** again.

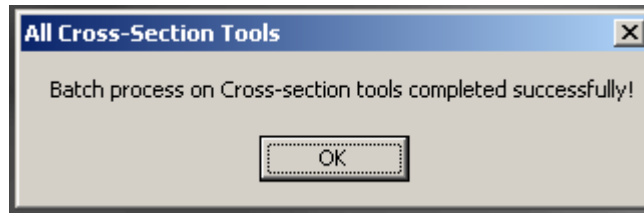


Open the attribute table of the new feature class XSCutLines3D and examine of the populated fields.

viii. *Bridges/Culverts*


Bridges and culverts are treated similarly to creating the cross-section layer. Begin an editing session, and then select **Create New Feature** for the Task and **Bridges** as the Target layer in the Editor toolbar. Digitize lines tracing each bridge/culvert crossing for the stream. Bridges/culverts follow the same directional rules as the cross-section layer. Remember to draw them from left overbank to right overbank. You can use the TIN, the contours layer, or the aerial photo provided in the data folder to locate each bridge and draw a line along the centerline of the bridge without intersecting the cross sections. Extend your line beyond the ends of the bridge, so that you are sure to capture the topography of the section. Once finished, save edits and end your edit session.

ix. *Attributing Bridges/Culverts & Creating a 3D Feature Class*

From the HEC-GeoRAS toolbar, select **RAS Geometry / Bridges/Culverts / All**. The following window will pop-up menu. Use the drop-down menu to select the correct layer name for each item on the list. The first 3 items on the list will populate the empty fields in the attribute table of the Bridges/Culverts feature class. The last item (i.e., Bridges/Culverts Profiles) will be the name of a new feature class that will be created. The 2D feature class **Bridges** will be intersected with the TIN to create a feature class of the bridges in 3D. In the window below, the default name for this feature class **Bridges3D** is used.

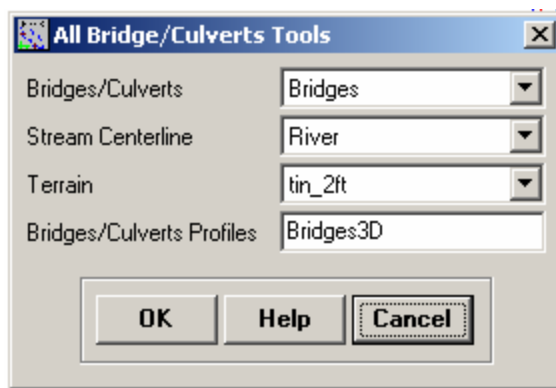

Select **OK** on the **All Bridge/Culverts Tools** window and the following message will appear.

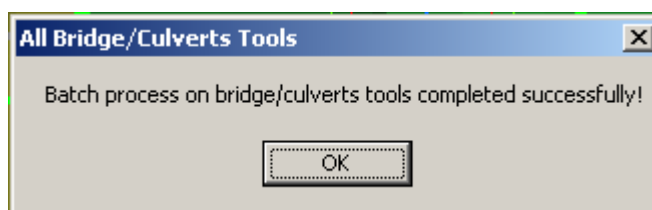


x. *Optional RAS Layers*

For the purpose of this tutorial, we are finished digitizing RAS layers. In the table of contents window in ArcMap, you will notice that there are several empty feature classes (SAConnections, StorageAreas, IneffAreas, BlockedObs, LandUse...) that were created at the beginning, but we did not populate them. It is fine to not use all of the optional RAS layers, but in the future you may come across a project where their application is beneficial to you. The *HEC-GeoRAS User's Manual* describes these additional RAS layers, their use, and instructions for applying them to a scenario.

4. Exporting GIS Data to HEC-RAS

- a.) Selecting Data for Export: From the HEC-GeoRAS toolbar, select **RAS Geometry / Layer Setup** from the menu. The **Layer Setup** window with four tabs (**Required Surface**, **Required Layers**, **Optional Layers** and **Optional Tables**) will appear. These tabs are shown in the next four figures and include the preferences you should choose for this tutorial. The purpose of the **Layer Setup** menu is to define which layers will be exported to HEC-RAS. In this example, many of the menu items will show a Null value because we did not use all of the optional RAS layers in this tutorial. Once you have made all your selections in the Layer Setup tabs, select **OK**.

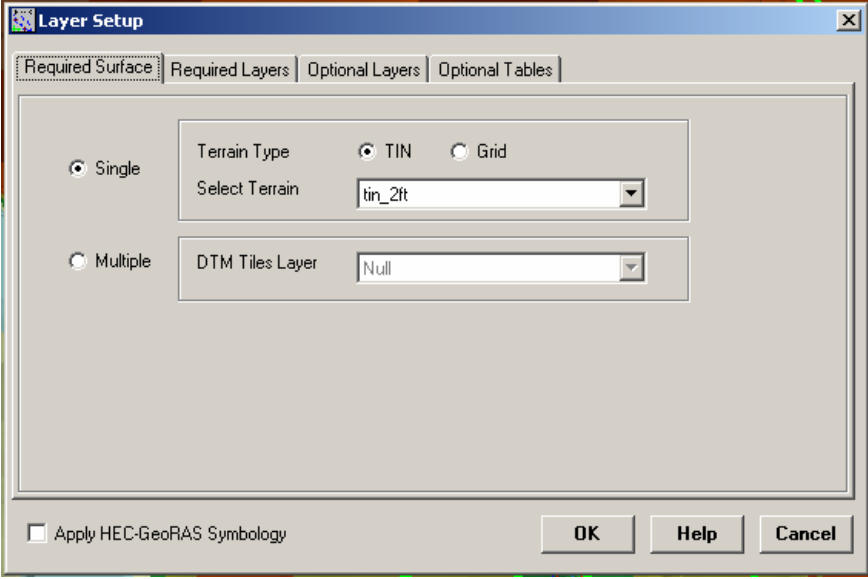

The 'Layer Setup' dialog box is shown with the 'Required Surface' tab selected. It contains two radio buttons: 'Single' (selected) and 'Multiple'. The 'Single' section has a 'Terrain Type' section with 'TIN' selected and a 'Select Terrain' dropdown menu showing 'tin_2ft'. The 'Multiple' section has a 'DTM Tiles Layer' dropdown menu showing 'Null'. At the bottom, there is a checkbox for 'Apply HEC-GeoRAS Symbology' and three buttons: 'OK', 'Help', and 'Cancel'.

Layer Setup

Required Surface Required Layers Optional Layers Optional Tables

☒ Single

Terrain Type ☒ TIN ☐ Grid


Select Terrain tin_2ft

☐ Multiple

DTM Tiles Layer Null

☐ Apply HEC-GeoRAS Symbology

OK Help Cancel

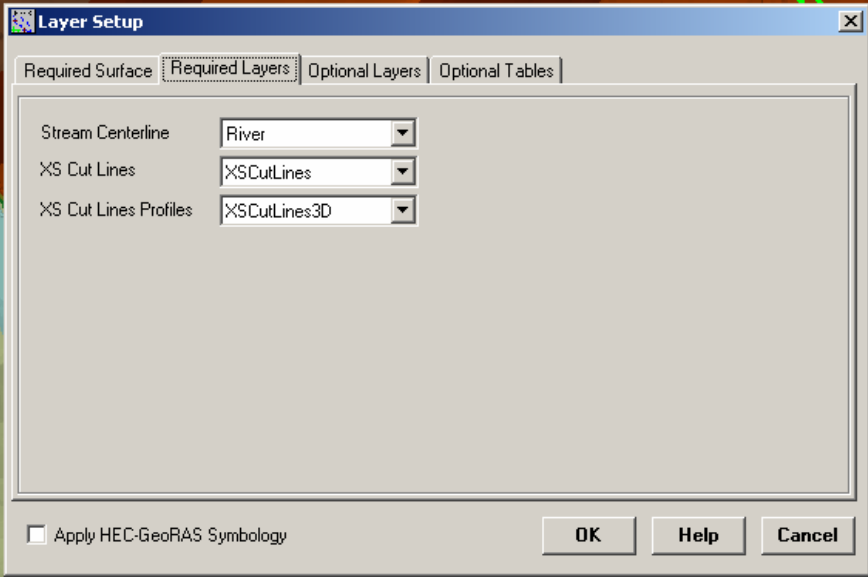

The 'Layer Setup' dialog box is shown with the 'Required Layers' tab selected. It contains three dropdown menus: 'Stream Centerline' (River), 'XS Cut Lines' (XSCutLines), and 'XS Cut Lines Profiles' (XSCutLines3D). At the bottom, there is a checkbox for 'Apply HEC-GeoRAS Symbology' and three buttons: 'OK', 'Help', and 'Cancel'.

Layer Setup

Required Surface Required Layers Optional Layers Optional Tables



Stream Centerline River

XS Cut Lines XSCutLines


XS Cut Lines Profiles XSCutLines3D

☐ Apply HEC-GeoRAS Symbology

OK Help Cancel

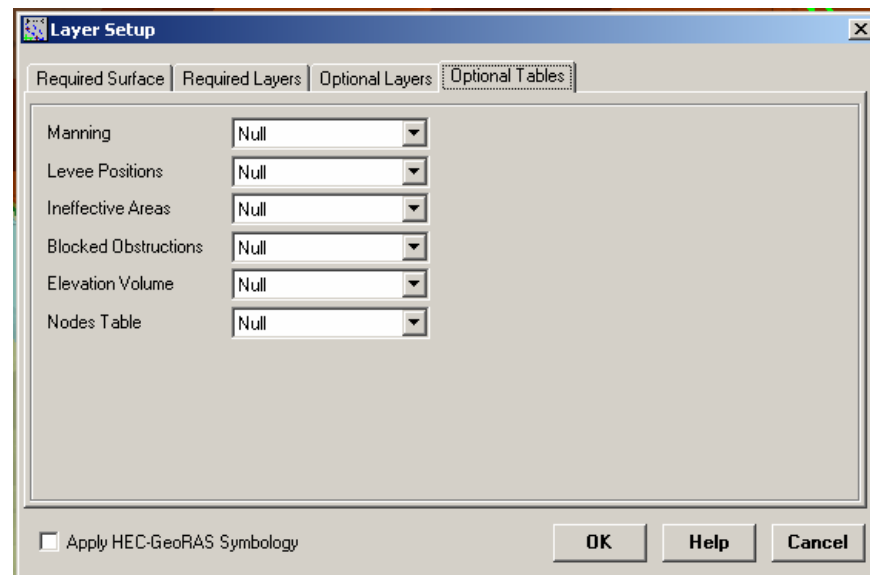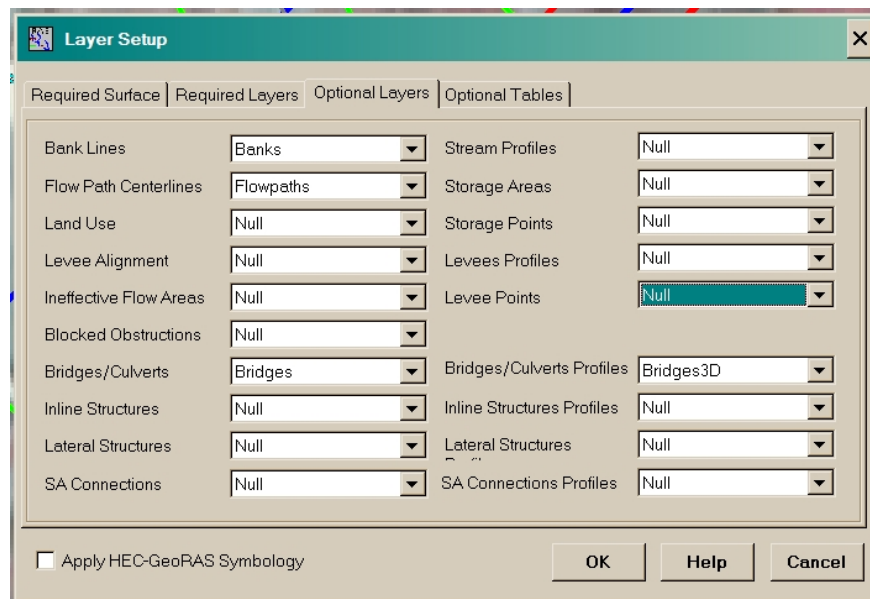

- b.) Exporting GIS Data: From the HEC-GeoRAS toolbar, select **RAS Geometry / Extract GIS DATA** menu item. The following window will appear. Choose a file name and directory to save the data in. Here, we will call the file by its default name **GIS2RAS** and save it in your working directory. Select **OK**.

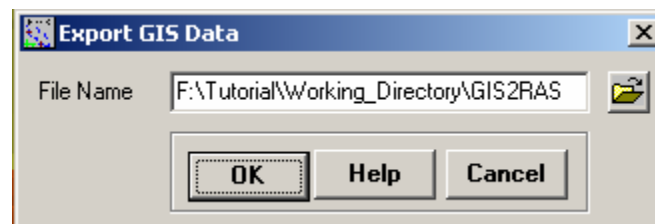


While HEC-GeoRAS is exporting the data (which takes several seconds), a series of information messages appear. Select **OK** for each message prompt. Finally, the following message will appear signaling successful exporting of GIS data. Select **OK**.




5. Hydraulic Analysis in HEC-RAS


This section presents how to perform a one-dimensional steady flow analysis of the creek using HEC-RAS (Hydrologic Engineering Center – River Analysis System). If not installed in your computer, download the file **HEC-RAS313_Setup.exe** from <http://www.hec.usace.army.mil/software/hecras/hecras-download.html> and install HEC-RAS 3.1.3 according to the instructions. For your convenience, the file **HEC-RAS313_Setup.exe** has been included in the **HECSoftware** folder.

- a.) Creating a HEC-RAS Project: Begin by opening the HEC-RAS program. The main HEC-RAS interface window will appear on your screen, and looks like the following picture.

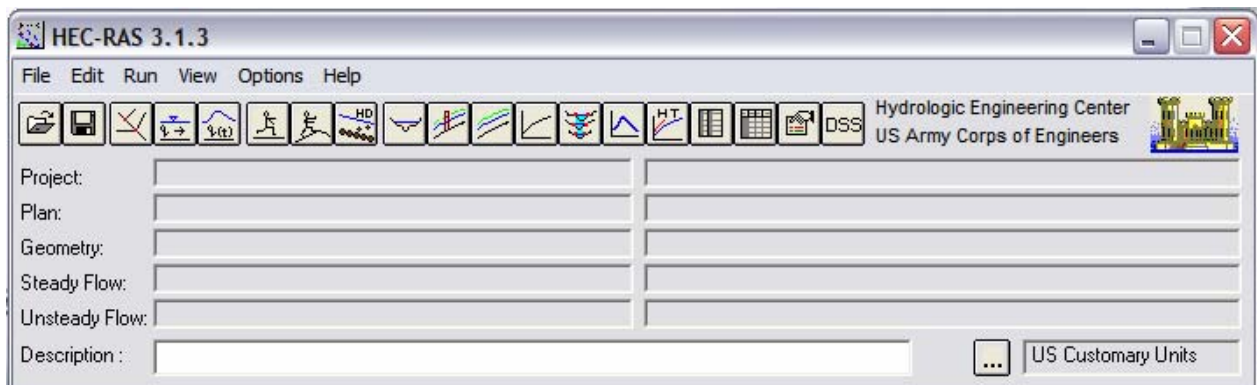

Select **File / New Project** from the main HEC-RAS interface. A window will appear which looks like the next picture. Browse to your working directory and create a new folder called **RAS** in it to store the HEC-RAS files separately. Enter a title and file name for the project (they can have the same name). Select **OK**. Select **OK** again on the menu that pops up. Note that by default the units are “US Customary Units” (i.e., English units). Do not change them since these units match the ones we were working with in GIS.

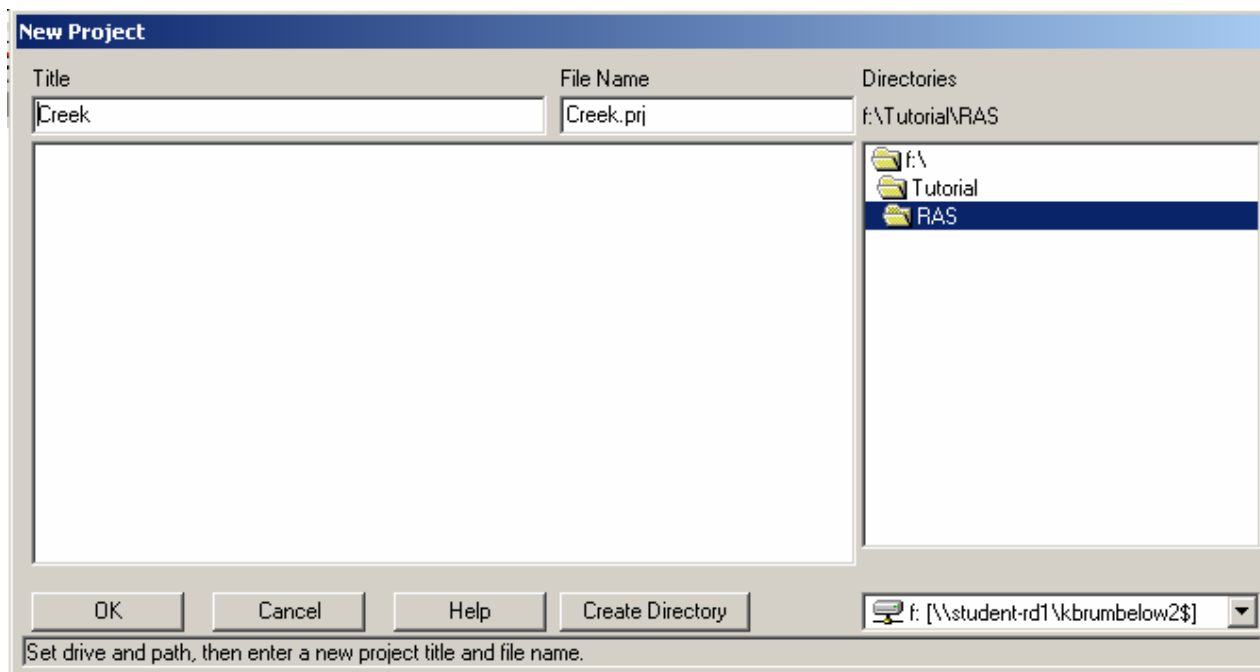

- b.) Importing RAS Layers from GIS: Open the **Geometric Data** window by selecting  from the main HEC-RAS user interface. Select **File / Import Geometry Data / GIS Format** In the browser which appears, navigate to your working directory where you stored the RAS GIS import file **GIS2RAS** (notice it is called **GIS2RAS.RASImport.sdf**) and select it. Select **OK** in the browsing window.

The **Import Options** window with four tabs will appear. Make sure that **US Customary Units** is selected on the first tab, then press **Next**. The second tab is for selecting river reach stream lines. For this tutorial, we have only one river and one reach – make sure it appears in the import window with the drop-down arrow, then select **Next**. The third tab is **Cross Sections and IB Nodes**. This tab lists all of our cross-sections as well as the two bridges. Scroll down to see them all. Make sure all of the boxes are checked. The window should look like the picture below. The fourth tab is grayed out because we did not create any storage areas or storage connections in this tutorial. Therefore, we are finished selecting the data we want to import, so select **Finished – Import Data** from the **Import Options** window.

Import Options

Intro | River Reach Stream Lines | Cross Sections and IB Nodes | **Storage Areas and Connections**

Import River: (All Rivers) Import As: # new RS = 21 (# new RS to import = 21)
 Import Reach: Import As: Check New Check Existing Reset

The imported RS can be edited here, change the import River and Reach names on the previous tab

	Import File	Import File	Import File	Import As	Import	Import
	River	Reach	RS	RS	Status	Data
1	River1	Reach1	4600.334	4600.334	new	✓
2	River1	Reach1	4348.715	4348.715	new	✓
3	River1	Reach1	4228.529	4228.529	new	✓
4	River1	Reach1	4181.474 BR	4181.474	new	✓
5	River1	Reach1	4116.788	4116.788	new	✓
6	River1	Reach1	4091.638	4091.638	new	✓
7	River1	Reach1	3906.540	3906.540	new	✓
8	River1	Reach1	3691.426	3691.426	new	✓
9	River1	Reach1	3280.971	3280.971	new	✓
10	River1	Reach1	3066.478	3066.478	new	✓
11	River1	Reach1	2859.056	2859.056	new	✓

Select Cross Section Properties to Import

☒ Node Names
☐ Descriptions
☐ Picture References
☒ GIS Cut Lines
☒ Station Elevation Data
☒ Reach Lengths
☐ Manning's n Values
☒ Bank Stations
☐ Contraction Expansion Coef
☐ Levees

☐ Ineffective Areas
☐ Blocked Obstructions
☐ XS Lids
☐ Ice Data
☐ Rating Curves
☐ Skew Angle
☐ Fixed Sediment Elevation
☐ HTab Parameters
☐ Pilot Channel Parameters

Match Import File RS to Existing Geometry RS
 Matching Tolerance: .01 Match to Existing


Round Selected RS
 2 decimal places Round

Generate RS Based on main channel lengths
 (only available when looking at a single reach)
 Starting RS Value: 0 2 decimal plac
 Create RS in miles Create RS in feet


Previous Next Finished - Import Data Cancel


Note: If at any point you need to revise or add cross-sections or bridges to your data set, you can add them in GIS (i.e., draw and attribute them), then return to the Import Options menu in HEC-RAS and import only the sections which are new to your data set by checking the appropriate boxes.

Now, your **Geometric Data** window should look similar to the following picture. A georeferenced schematic of your river system will appear in the window. To save this data, in the **Geometric Data** window, select **File / Save Geometric Data** and enter a filename in the **Title** slot of the dialog box. I descriptively named my geometry data **Geometry**.

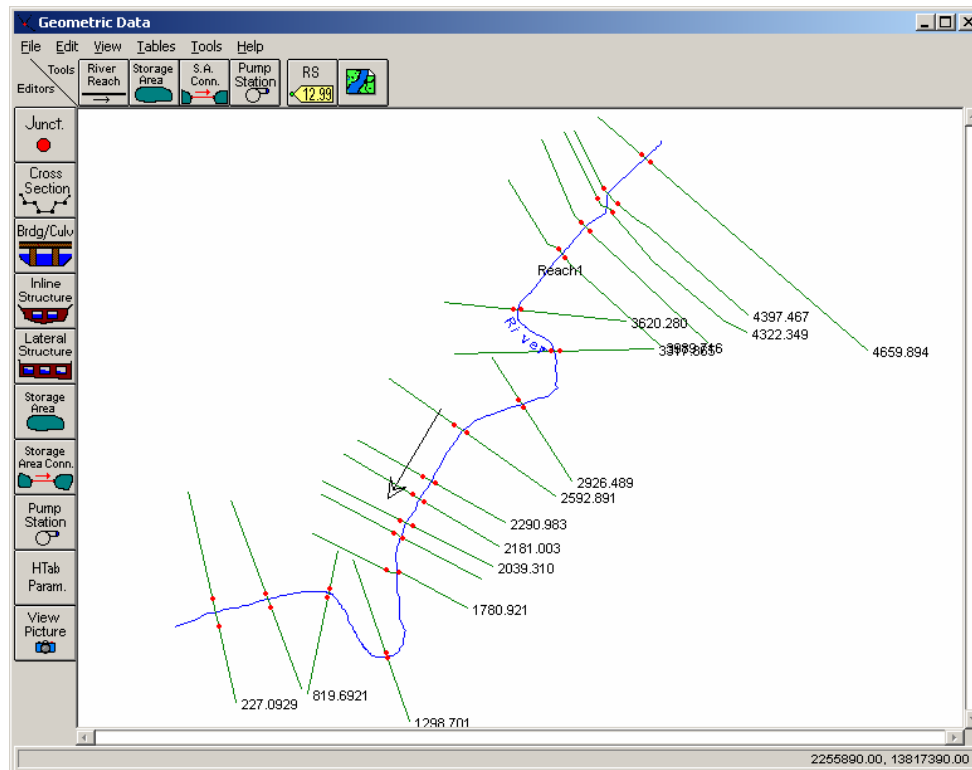

c.) Entering Additional Data in the HEC-RAS Model: We will now use the **Geometric Data** window to help us enter more data about the stream.

- i. Cross-Section Points Filter: HEC-RAS allows a maximum of 500 data points per cross-section. HEC-RAS has a cross-section points filter, which will allow us to delete excess and duplicate points. In the **Geometric Data** window, select **Tools / Cross Section Points Filter**. Once the **Cross Section Points Filter** window opens, select the **Multiple Locations** tab and then the **Minimize Area Change** tab. In the **River** option, select **(All Rivers)** and press the arrow  to select them. Just for practice, we will filter our cross-section to 250 points; but most of the cross-sections already fall below this value. Enter **250** for the number of points to filter down to and press the **Filter Points on Selected XS** button to complete this task. The following picture shows all of the appropriate options selected.

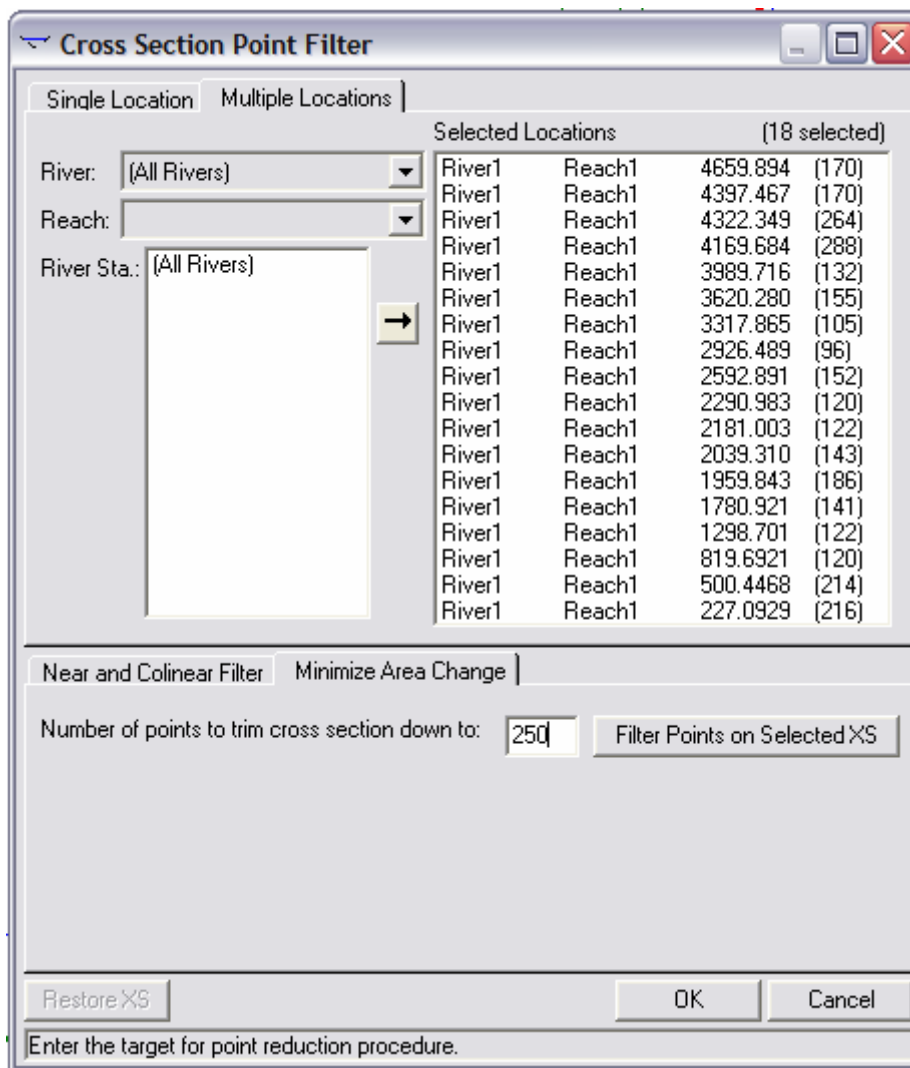

A new window will appear showing the cross-sections that had more than 250 points or duplicate points, and were filtered. Select **Close** on this window, and then select **OK** on the **Cross Section Points Filter** window. In the **Geometric Data** window click on **File / Save Geometry Data** to keep these changes.

- ii. Manning's Roughness Values (n): Next, we need to enter Manning's n values for each cross-section. In the **Geometric Data** window select **Tables / Manning's n or k values...**. In the **Edit Manning's n or k Values** window, select **(All Rivers)** from the drop-down box in the **River** option. You will see all of your cross-sections and two bridges listed in the table, with blank spaces where you will type in your n values. The fields **n#1** and **n#3** are for the Manning's n values for the overbanks (floodplains). Enter 0.1 in these fields for all cross-sections, but not for the bridges. Similarly, the field **n#2** is for the main channel Manning's n value. Enter 0.05 in this field for all cross-sections, but not for the bridges. Once you've populated the whole table, select **OK**. The window will close. Make sure you save your geometry data again to retain this information.

Edit Manning's n or k Values

River: (All Rivers) ☐ Edit Interpolated XS's

Reach: All Regions

Channel n Values have a light green background

Selected Area Edit Options


Add Constant ... Multiply Factor ... Set Values ... Replace ...

	River	Reach	River Station	Frctn (n/K)	n #1	n #2	n #3
1	River1	Reach1	4600.334	n			
2	River1	Reach1	4348.715	n			
3	River1	Reach1	4228.529	n			
4	River1	Reach1	4116.788	n			
5	River1	Reach1	4091.638	n			
6	River1	Reach1	3906.540	n			
7	River1	Reach1	3691.426	n			
8	River1	Reach1	3280.971	n			
9	River1	Reach1	3066.478	n			
10	River1	Reach1	2859.056	n			

OK Cancel Help


Levees: Levees are linear features that contain the flow of water inside the floodplain. Some channel scenarios may require levees to be defined in order to maintain the true flowpath of the water. Usually, levees represent man-made features in tended to constraint the floodplain, but can also represent other type of high ground (such as roadway embankments or ridges in the natural topography of the landscape) that blocks the flow until they are overtopped. Levees are only required if the high ground prevents the stream from being hydraulically connected to the terrain at the other side. If the terrain at the other side is hydraulically connected to the stream upstream of the high ground, a levee should not be placed on the cross-section.

In the example presented in this tutorial, the railroad track embankment, which runs somewhat parallel to the creek, acts as a levee. The way the cross-sections have been drawn in this tutorial, the most upstream cross-sections intersect the railroad embankment, and require levees to be defined in HEC-RAS. Your cross-sections may or may not cross the railroad tracks, so you will have to inspect your own sections to make sure. In the data provided, **Railroad.shp** depicts the railroad embankment. You may want to add it to your map to see if your cross-sections extend across it. You can also look for topographical features in the landscape intersected by your cross-sections for potential levee locations.

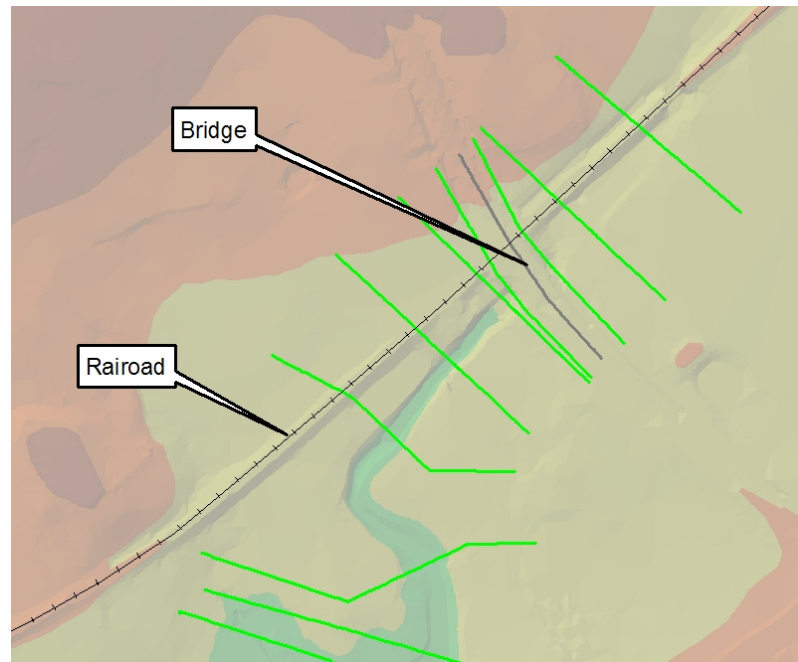


To place levees in HEC-RAS, follow these directions. Levees will be placed on the roadway embankment for the most upstream cross-sections. Only one cross-section is presented in this example to show you how to add levees, but you should add levees for all the cross sections to which levees apply.



In the **Geometric Data** window, select the **Cross Section** button. This will bring up a window displaying your cross-sections one at a time. Using the arrow buttons , browse to one of your cross-sections that intersects the railroad embankment (this tutorial will use the most upstream cross-section for this example). On the **Cross Section Data** window, select **Options / Levees** and the window in the next picture will appear.

Enter the station and elevation of the levee in this window. You can add two levees in a cross-section (one on the left bank and one on the right bank) or just one levee. Note that you need levees only in the cross sections that have more than one

channel. A simple way to locate the levee points is to click on them using the arrow pointer and reading the coordinates in the lower right corner of the display area. Once you entered the levee data, select **OK**. Next, select **Apply Data** in the **Cross Section Data** window for the data to be added to the cross section information and the levees to appear on the cross-section schematic. The next picture shows a cross-section used in this example with the levee on the right overbank.

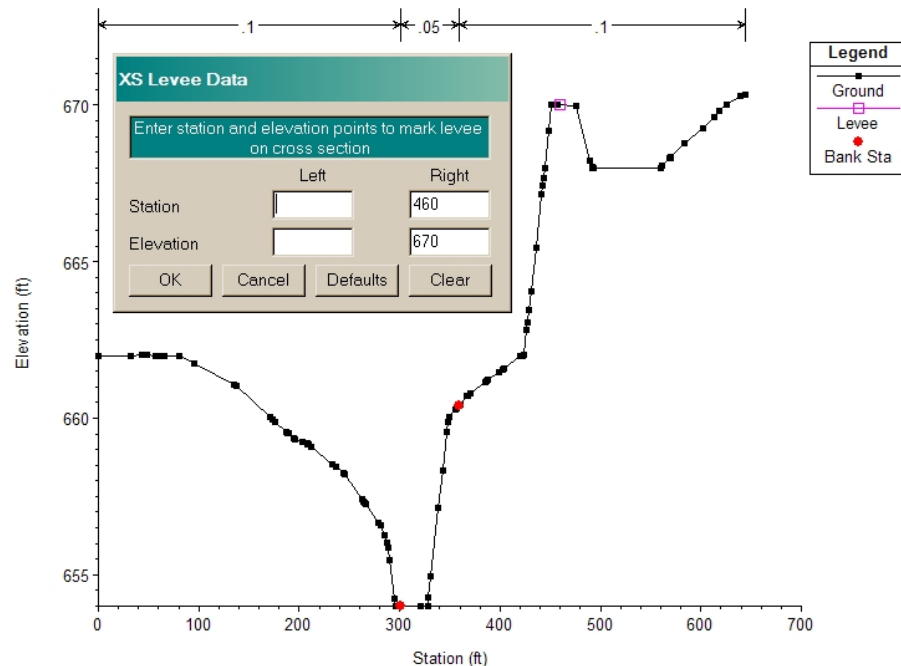


In this specific case, the definition of the levee was unnecessary since the water will overflow the cross section on the left end of the cross-section before flowing on the right channel.

Inspect each cross-section and determine whether or not it needs levees. Add levees where applicable. When finished, save your geometry data again.

- iii. Bridge & Culvert Data: Upstream Bridge: This section will describe how to enter the data to model the first bridge crossing. The following site photo shows the upstream bridge.




In the **Geometric Data** window, select the **Bridge/Culvert** button, which will bring up the **Bridge Culvert Data** editor.

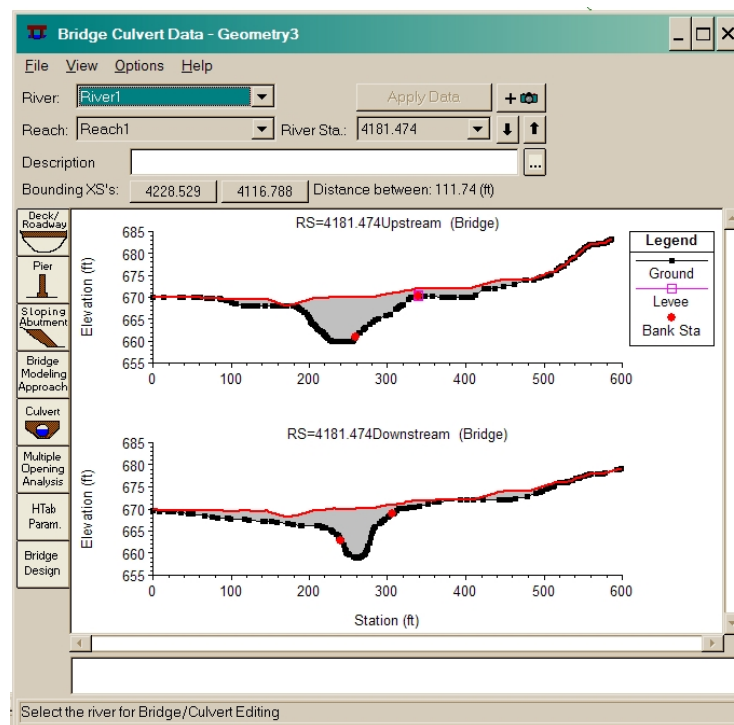

In the **Bridge Culvert Data** editor, choose the upstream bridge out of the two



options in **River Sta.**, select the **Deck/Roadway** button, which will bring up **Deck/Roadway Data** editor. Enter the **Width** of the bridge parallel to the flow (i.e., 44 ft) and the **Distance** “between the upstream side of the bridge deck and the cross section immediately upstream of the bridge” (i.e., see figure below), and click **OK**.

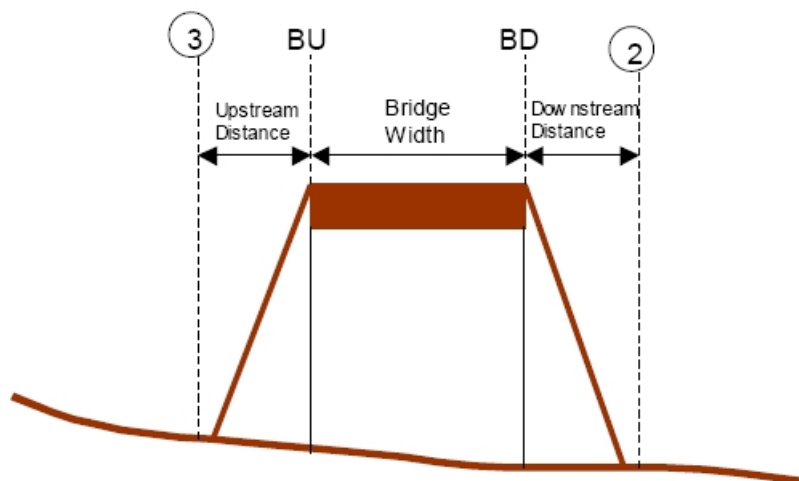

(USACE HEC-RAS User's Manual, 2002)

The following picture shows the **Deck/Roadway Data** editor after the appropriate information has been entered for the upstream bridge. Note that the **Distance** value depends on where you located your cross sections and, most likely, will not be 38.4 ft for you.

Deck/Roadway Data Editor						
Del Row				Distance	Width	Weir Coef
Ins Row				38.4	44	2.6
Upstream			Downstream			
	Station	high chord	low chord	Station	high chord	low chord
1	0.	669.82		0.	669.82	
2	3.9	669.82		3.9	669.82	
3	5.15	669.81		5.15	669.81	
4	24.43	669.73		24.43	669.73	
5	24.82	669.73		24.82	669.73	
6	26.21	669.73		26.21	669.73	
7	27.39	669.72		27.39	669.72	
8	44.22	669.66		44.22	669.66	
U.S Embankment SS		0		D.S Embankment SS		0
Weir Data						
Max Submergence:		0.95		Min Weir Flow EI:		
Weir Crest Shape						
<input checked="" type="radio"/> Broad Crested <input type="radio"/> Ogee						
OK		Cancel		Clear		Copy US to DS
Enter distance between upstream cross section and deck/roadway. (ft)						



Next, in the **Bridge Culvert Data** editor, select the **Culvert** button. This will bring up the **Culvert Data Editor** window. The following picture shows this editor after the appropriate information has been entered for the upstream bridge.

Enter the information as is shown in the next picture, then select **OK**. Do not just copy these values, they depend on the location of your cross sections.

The **Distance to Upstrm XS** is the same one you entered previously; that is, the distance between the bridge and the next upstream cross section. The **Centerline Stations** represent the centerlines of the two side by side box culverts. Since your bridge cut-line may be of a different length or in a different place than mine, you must enter these values yourself. Find what looks like the center station of your upstream channel cross-section, subtract 5 feet from this value and enter this value as the **Centerline Station** for the upstream section of culvert 1. If you add 10 feet to the centerline station of the upstream culvert 1, you get the correct placement of the centerline station of upstream culvert 2. Follow the same process for the downstream culvert alignment based upon the downstream channel centerline and make points 1 and 2 ten feet apart again. The **Upstream Invert Elev.** and **Downstream Invert Elev.** will also depend on the specific location where you defined your cross sections.

Culvert Data Editor

Add Copy Delete ... Culvert ID: Culvert #1

Solution Criteria: Highest U.S. EG Rename ...

Shape: Box Span: 8 Rise: 6

Chart #: 8 - flared wingwalls

Scale #: 1 - Wingwall flared 30 to 75 deg.

Distance to Upstrm XS: 38.4 Upstream Invert Elev: 660.2

Culvert Length: 44 Downstream Invert Elev: 659.8

Entrance Loss Coeff: 0.3 # identical barrels: 2

Exit Loss Coeff: 1

Manning's n for Top: 0.01

Manning's n for Bottom: 0.01

Depth to use Bottom n: 2


Depth Blocked: 0

Centerline Stations		
	Upstream	Downstream
1	230.	255.
2	240.	265.
3		
4		

OK Cancel Help

Select culvert to edit

After clicking **OK** in the **Culvert Data Editor** window, the **Bridge Culvert Data** window should look similar to the picture below.

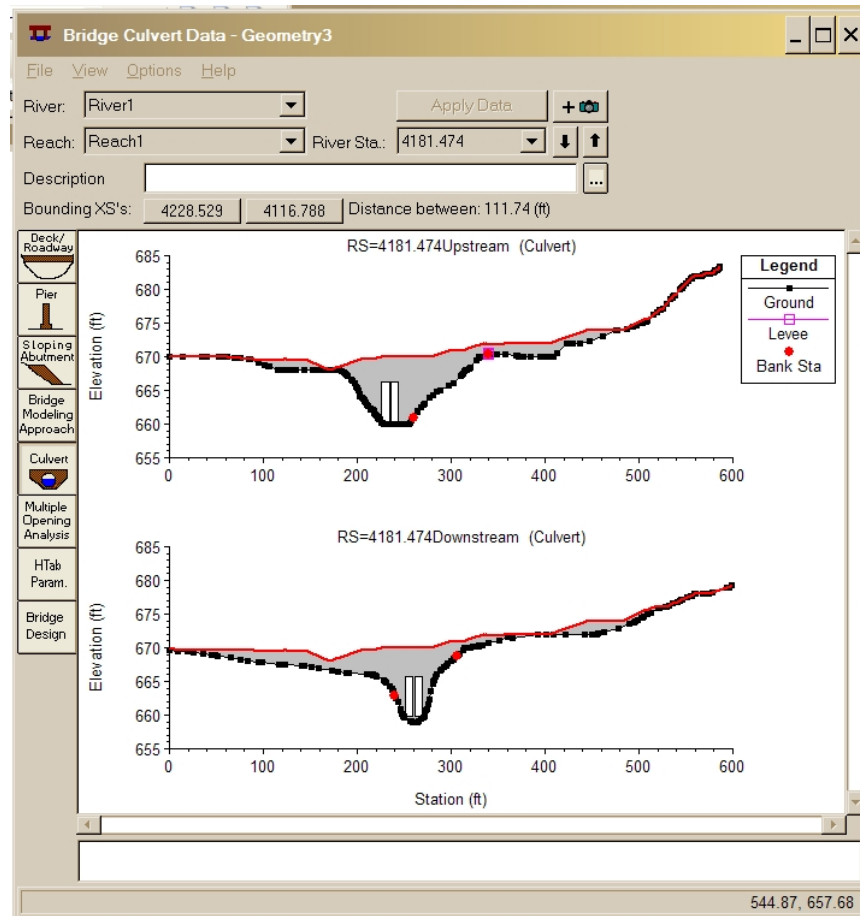

- iv. Bridge & Culvert Data: Downstream Bridge: This section describes how to enter the data to model the bridge and culvert for the second bridge crossing. The following site photo shows this bridge crossing.



Follow the same steps you followed for the first bridge. The following figures show you the data that has to be entered. Recall that some of the data depends on your cross sections.

Culvert Data Editor

Add Copy Delete ... Culvert ID: Culvert #1

Solution Criteria: Highest U.S. EG Rename ...

Shape: Circular Span: Diam: 6.5

Chart #: 1 - Concrete Pipe Culvert

Scale #: 1 - Square edge entrance with headwall

Distance to Upstrm XS: 20 Upstream Invert Elev: 646

Culvert Length: 45 Downstream Invert Elev: 645

Entrance Loss Coeff: 0.5 # identical barrels: 4

Exit Loss Coeff: 1

Manning's n for Top: 0.02

Manning's n for Bottom: 0.025

Depth to use Bottom n: 1.5

Depth Blocked: 0

Centerline Stations		
	Upstream	Downstream
1	293.	295.
2	303.	305.
3	313.	315.
4	323.	325.

OK Cancel Help

Deck/Roadway Data Editor

Del Row	Distance	Width	Weir Coef
Ins Row	20	45	2.6

Upstream				Downstream			
	Station	high chord	low chord		Station	high chord	low chord
1	0.	655.45		0.	655.45		
2	6.69	654.96		6.69	654.96		
3	8.98	654.79		8.98	654.79		
4	10.04	654.74		10.04	654.74		
5	14.11	654.62		14.11	654.62		
6	15.01	654.57		15.01	654.57		
7	16.04	654.51		16.04	654.51		
8	17.01	654.41		17.01	654.41		

U.S. Embankment SS: 0 D.S. Embankment SS: 0

Weir Data

Max. Submergence: 0.95 Min Weir Flow El:


Weir Crest Shape

☒ Broad Crested

☐ Ogee


OK Cancel Clear Copy US to DS


Enter distance between upstream cross section and deck/roadway. (ft)

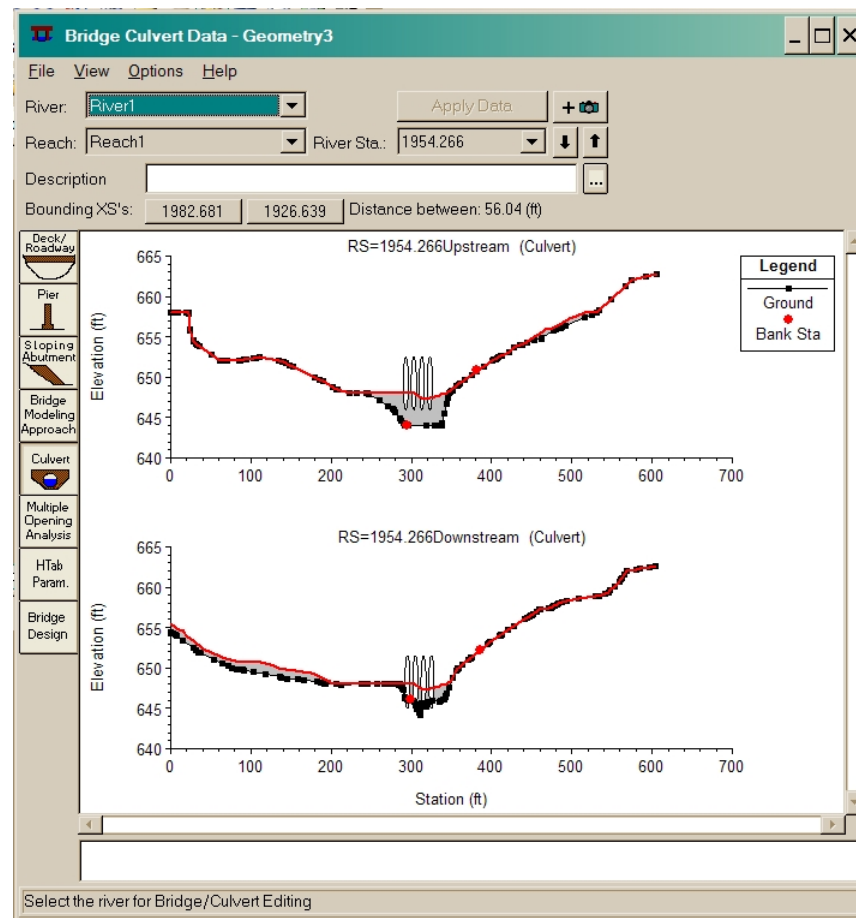

When you are finished entering data, make sure you **SAVE** the geometry data file, or all of this will disappear!

 d.) Running the HEC-RAS Model:

- i. Enter Steady Flow Data: From the main HEC-RAS window, select the **Edit/Enter Steady Flow Data** button . The Steady Flow Data Editor will open. In this editor, enter **3** in the option **Enter / Edit Number of Profiles (2000 max)** and then click on the **Apply Data** button. Next, select **Options / Edit Profile Names** from the top menu and, in the table that pops up, enter the information displayed in the following picture. Click on **OK**.

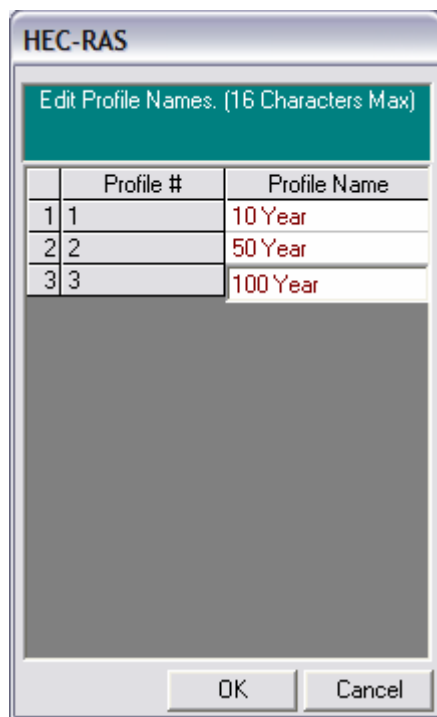

In the **Steady Flow Data** window, you will see that the most upstream station is already listed. We will add a second “flow change location” at the cross section immediately upstream of the second bridge. The river station of this second cross section will vary based upon where you placed your cross sections. Use the network schematic in the **Geometric Data** window to identify this cross section. Back to the **Steady Flow Data** window, select the cross section from the drop-down menu next to **River Sta** and then click on the **Add a Flow Change Location** button. A second row will be added to your **Steady Flow Data** table with this river station listed. Now, we want to enter the peak flows (in cfs) for these two river stations for the 10, 50, and 100 year events³. The following picture shows the peak flows listed for these river stations. Select the **Apply Data** button after you enter all the flows.

³ These peak flows were obtained by running the HEC-HMS model for the 2003 FEMA mapping of the Guadalupe River. For the purpose of this tutorial, these data is given to you.

Steady Flow Data

File Options Help

Enter/Edit Number of Profiles (2000 max):

Locations of Flow Data Changes

River:

Reach: River Sta.:

Flow Change Location			Profile Names and Flow Rates			
	River	Reach	RS	10 Year	50 Year	100 Year
1	River1	Reach1	4659.894	3363.57	5196.00	5839.90
2	River1	Reach1	2039.310	721.27	1070.85	1169.87


Edit Steady flow data for the profiles (cfs)

Now, select the **Reach Boundary Conditions** button. Since a subcritical flow analysis requires only a downstream boundary condition, click on the cell below the word **Downstream**. Next, click the **Normal Depth** button and enter 0.009 in the blank space as seen in the next picture. This slope value is approximately the average slope of the entire channel. Click on **OK**.


HEC-RAS


Enter the downstream slope for normal depth computation for reach: Reach1 for all profiles.

The **Steady Flow Boundary Conditions** window should now look like the following picture. Click on **OK**.

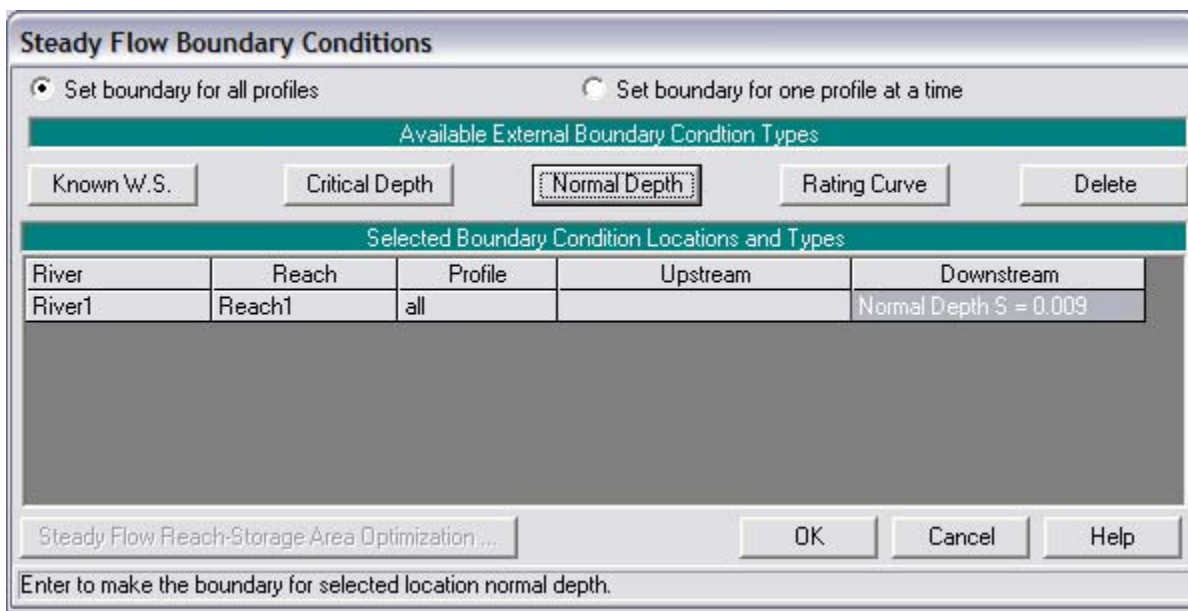


You are now finished entering steady flow data. Select **File / Save Flow Data** from the **Steady Flow Data** window. Give this file a name, for example **Steady_Flow**, and save it in your RAS file folder in your working directory. You can now close the **Steady Flow Data** window.

- ii. Run Steady Flow Analysis: We are now ready to do a steady flow hydraulic analysis of the stream. In the main HEC-RAS user interface, press the **Steady Flow Simulation** button . You'll see the following window appear. The names of your **Geometry File** and **Steady Flow File** will be listed in the options. Choose the **Subcritical** option as your **Flow Regime**.

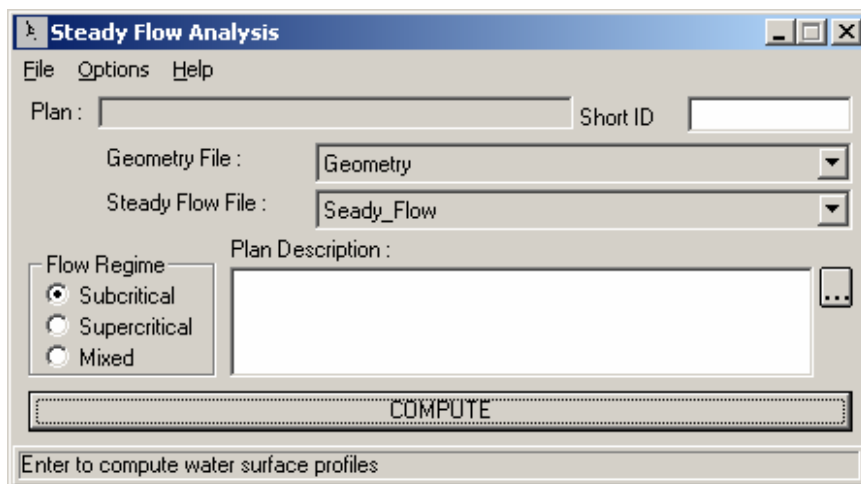


Click on **COMPUTE** to run the steady flow analysis. If it is successful, you will see the message below; if not, you may receive a warning/error message which you will have to address before the model will run successfully.

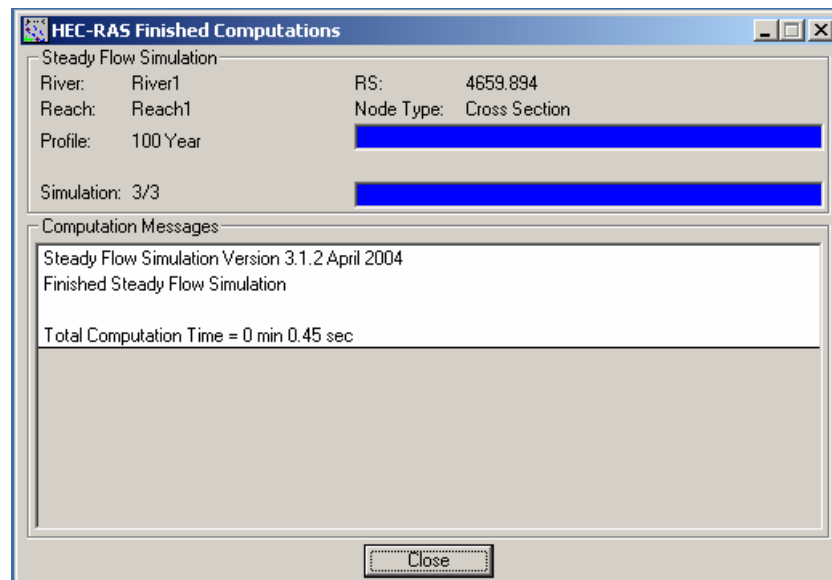


- e.) Exporting Data Back to GIS: Once our hydraulic model is run successfully, we are ready to export the high water surface elevations for the three flow scenarios back to GIS.

From the main HEC-RAS window, select **File / Export GIS Data**. The following window will appear. Save this file to your RAS folder in your working directory and let it be saved with the default name “RASexport”. Choose the same options as shown in this picture and then select **Export Data**.

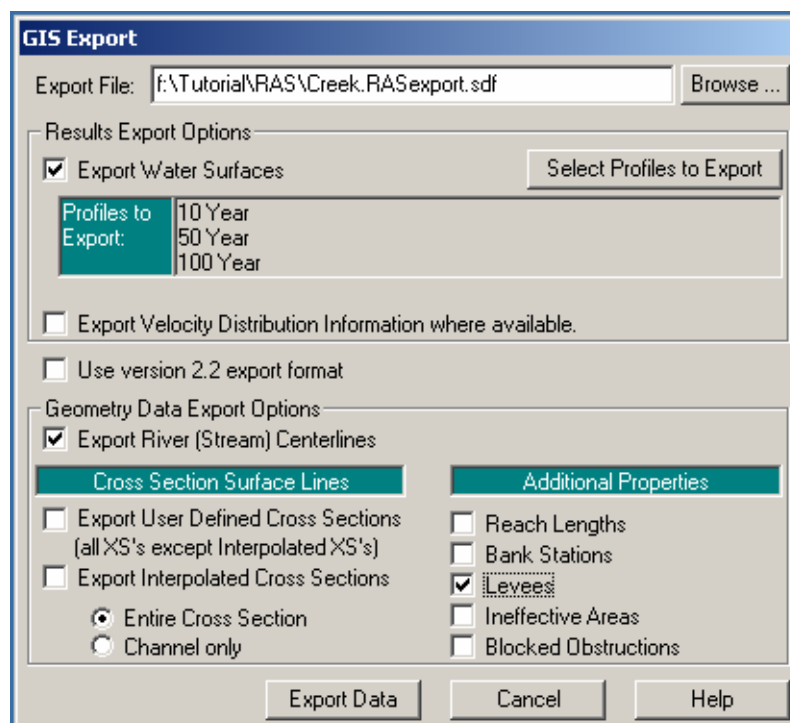


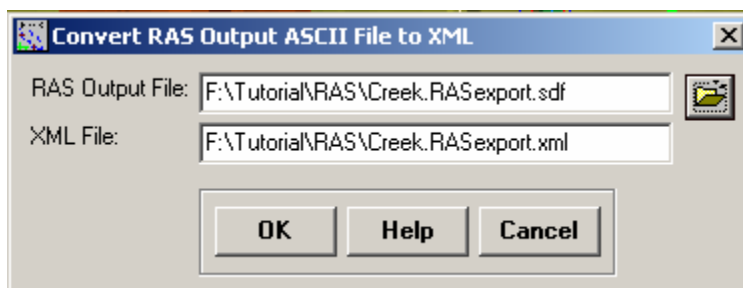
If your data were successfully exported, the following message appears.

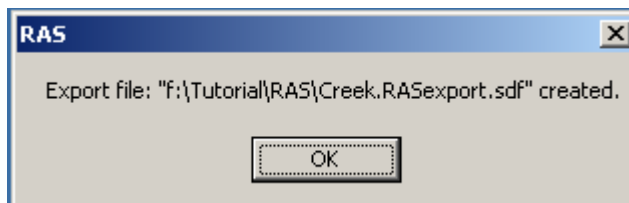

6. Importing Data from HEC-RAS

Return to your project in ArcMap and follow these directions to import the data from your HEC-RAS hydraulic model.


On the HEC-GeoRAS toolbar, click on the **Import RAS SDF File** button . The following window will appear. Use the browser to locate the RAS Output File you just created in HEC-RAS, probably stored in your RAS folder in your working directory. Select **OK** and this action will convert the SDF file to an XML file, which GIS can read.



If you are successful in file conversion, you will receive the following message.



Next, from the HEC-GeoRAS toolbar, select **RAS Mapping / Layer Setup** from the menu. The following dialog box will appear. Make the same selections as shown in the picture. You will have to give your analysis a name, select the TIN option and browse to its location, select your working directory for the output file location, and input 2 as the rasterization cell size since our original DEM has a 2-foot cell size. When you've made these selections, select **OK**.

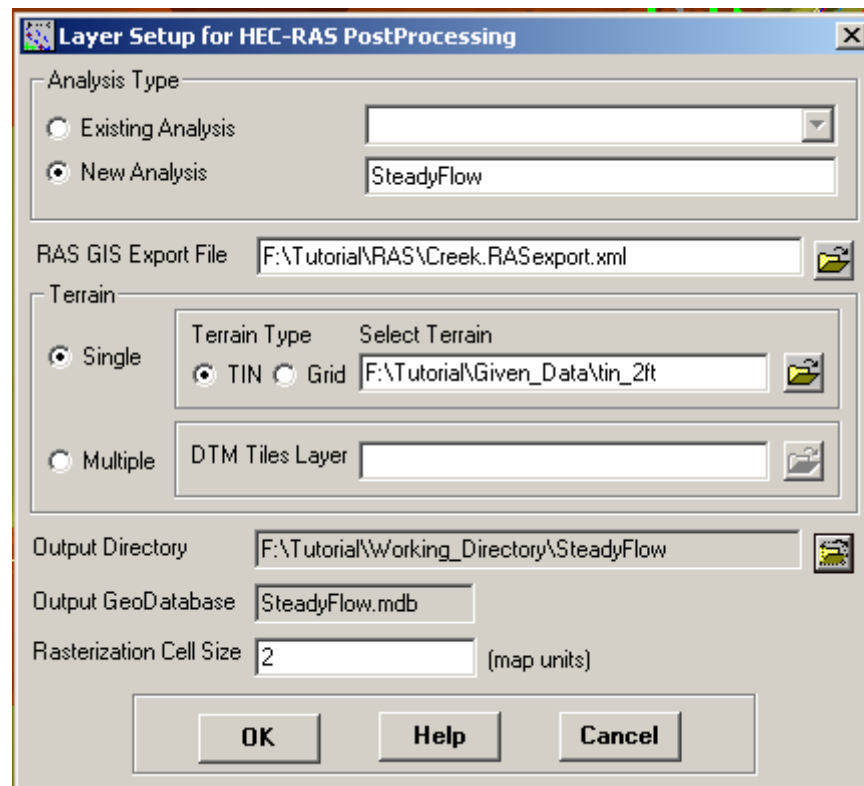

This action will create a new data frame with the name of your new analysis, in this example **SteadyFlow**. Look at the bottom of the ArcMap table of contents and you will see the new data frame with the TIN added to it.

Next, on the HEC-GeoRAS toolbar, select **RAS Mapping / Read RAS GIS Export File**. This action will import the HEC-RAS results as feature classes (**River2D**, **XS Cut Lines**, and **Bounding Polygon**) to your new data frame. It may take a few minutes to finish depending on your computer. Additionally, a new geodatabase with your analysis name (**SteadyFlow**) will be created in your working directory. Your map should look like the following picture.




Examine the attribute table of the new **Bounding Polygon** feature class. You will notice that there are three rows in the table, one for each flood event (10, 50, and 100 year flows). The purpose of the bounding polygon is to limit the extents of the floodplain. You'll notice that the bounding polygon will conform to the boundaries of any levees you placed in the model unless they are overtopped by the flood flows.

7. Mapping Floodplains Using GIS


Floodplain mapping is completed in two steps. First, a water surface TIN will be constructed from the cross section water surface elevations. We will have three TINs, one from each flood frequency. Second, the water surface TIN is intersected with the digital terrain model to create floodplain polygons for each flow scenario.

In the HEC-GeoRAS toolbar, select **RAS Mapping / Inundation Mapping / Water Surface Generation**. The following window will appear. Select all three water surface profiles (hold down Ctrl) and then select **OK**.

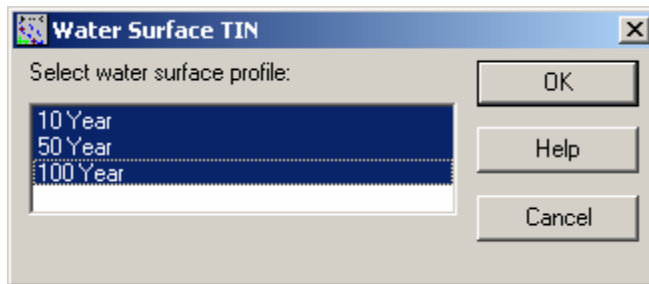

Three new TINs (t 100 year, t 50 year, and t 10 year) will be added to your map.

On the HEC-GeoRAS toolbar, select **RAS Mapping / Inundation Mapping / Floodplain Delineation / GRID Intersection** from the menu. The following window will appear. Again, select all three water surface profiles and then select **OK**. It may take a few minutes to finish depending on your computer.

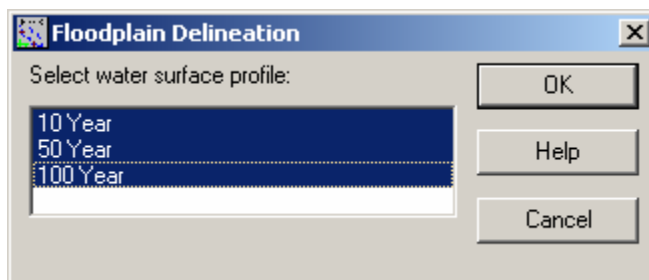


After this process is finished, several new feature classes will be added to your data frame. The feature classes named **b 10 year**, **b 50 Year**, and **b 100 Year** are the floodplain boundary feature classes. The grids **d 10 Year**, **d 50 Year**, and **d 100 Year** represent the water inundation depths within the delineated floodplains.

You should examine your map with the following points in mind, and if something is not right you may have to redo part of your analysis.

- Does the cross section cut lines fully encompass the floodplain polygons? If not, you may need to extend your cross-section cut-lines.
- Does the placement of your levees make sense with the extents of the floodplains you have mapped?

The following maps show some final results for this hydraulic analysis and floodplain delineation using HEC-GeoRAS. Yours should look similar, but probably not identical. Note that, in the following figure, the floodplain is wider than the cross sections in some places (upstream of the first bridge). That implies that the **XS Cut Lines** have to be redefined and the entire process repeated again!

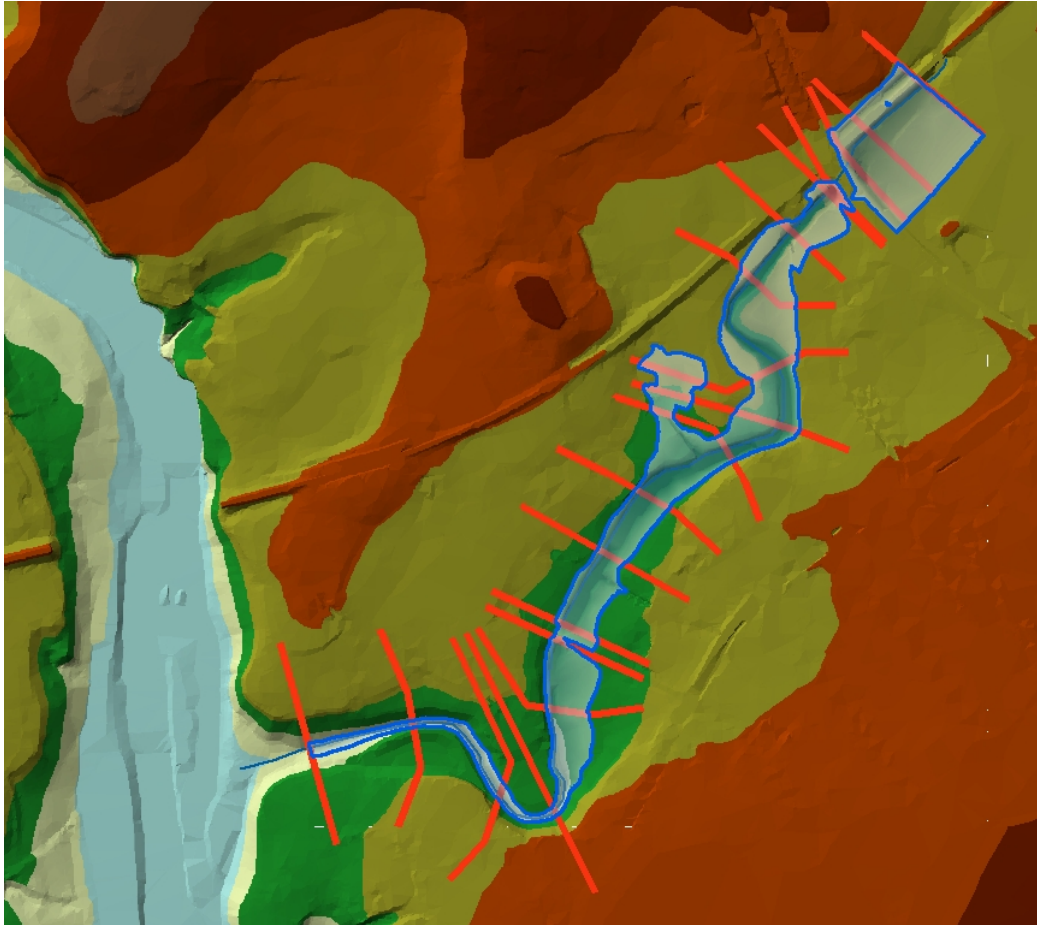

These materials may be used for research and educational purposes only. Please credit the authors and the Zachry Department of Civil Engineering at Texas A&M University. All commercial rights reserved. Copyright 2007: Texas A&M University.